

REPORT OF 040128

1. [Introduction](#)
2. [Summary](#)
 - [Instrument Unavailability](#)
 - [Browse Visual Inspection](#)
 - [Module Stepping Results](#)
 - [Data Analysis](#)
3. [Module Stepping](#)
4. [Internal Calibration pulses](#)
 - [Daily statistics \(row 3 and 24\)](#)
 - [Cyclic statistics \(row 3 and 24\)](#)
 - [cal pulses monitoring \(all rows\)](#)
5. [Raw Data Statistics](#)
 - [raw data mean I and Q](#)
 - [raw data stdev I and Q](#)
 - [raw gain imbalance](#)
6. [Wave Doppler analysis](#)
 - [Unbiased Doppler Error](#)
 - [Absolute Doppler](#)
 - [Doppler evolution versus ANX](#)

1 - Introduction

This report is based on the analysis of wave mode level-1 cross spectra (ASA_WVS_1P) products, which are the available few hours after the acquisition, on the high rate browse (BP) products and on the Module Stepping (MS) product.

2 - Summary

2.1 - Instrument Unavailability

No unavailabilities during the reported period.

2.2 - Browse Visual Inspection

No anomalies observed on available browse products

2.3 - Data Analysis

- Stable wave internal calibration pulses gain and phase.
- Stable raw data statistics.

-Nominal Doppler behavior.

3 - Module Stepping Mode

The MS mode provides an internal health check on an individual module basis. The purpose of this mode is to identify any malfunctioning modules and to identify modules for which calibration offsets are to be applied. No anomalies observed on available MS products:

Polarisation	Start Time
V	20040125 191054
H	20040127 194656

MSM in V/V polarisation

Pre-launch Reference	DDS-B (2003-06-12) reference
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>

MSM in H/H polarisation

Pre-launch Reference	DDS-B (2003-06-12) reference
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>

4 - Internal calibration Results

No anomalies observed.

4.1 - Daily statistics

row	stat	AveP1	AveP2	AveP3
3	mean	-3.66783	-22.4634	-8.14841
	stdev	0.00720554	0.0746451	0.00346247

24	mean	-5.11031	-21.1081	-8.14841
	stdev	0.0152796	0.0680547	0.00346247



4.2 - Cyclic statistics

row	stat	AveP1	AveP2	AveP3
3	mean	-3.69768	-22.5116	-8.15439
	stdev	0.00712927	0.0692892	0.00323627
24	mean	-5.23211	-21.1410	-8.15439
	stdev	0.567147	0.0636800	0.00323627



4.3 - cal pulses monitoring (all rows)



5 - RAW data statistics

No anomalies observed.

5.1 - Input mean I/Q

channel	stat	DSS-B
MEAN I	mean	0.000423285
	stdev	2.99989e-07
MEAN Q	mean	0.000312677
	stdev	3.55383e-07



5.2 - Input stdev I/Q

channel	stat	DSS-B
STDEV I	mean	0.115885
	stdev	0.00139060

STDEV Q	mean	0.116119
	stdev	0.00140527



5.3 - Gain imbalance I/Q



6 - Wave Doppler Analysis

Preliminary report. The data is not yet controlled


6.1 - Unbiased Doppler Error

Evolution of unbiased Doppler error (Real - Expected)
Ascending
Descending


6.2 - Absolute Doppler

Evolution of Absolute Doppler
Ascending
Descending


6.3 - Doppler evolution versus ANX

Evolution Doppler error versus ANX


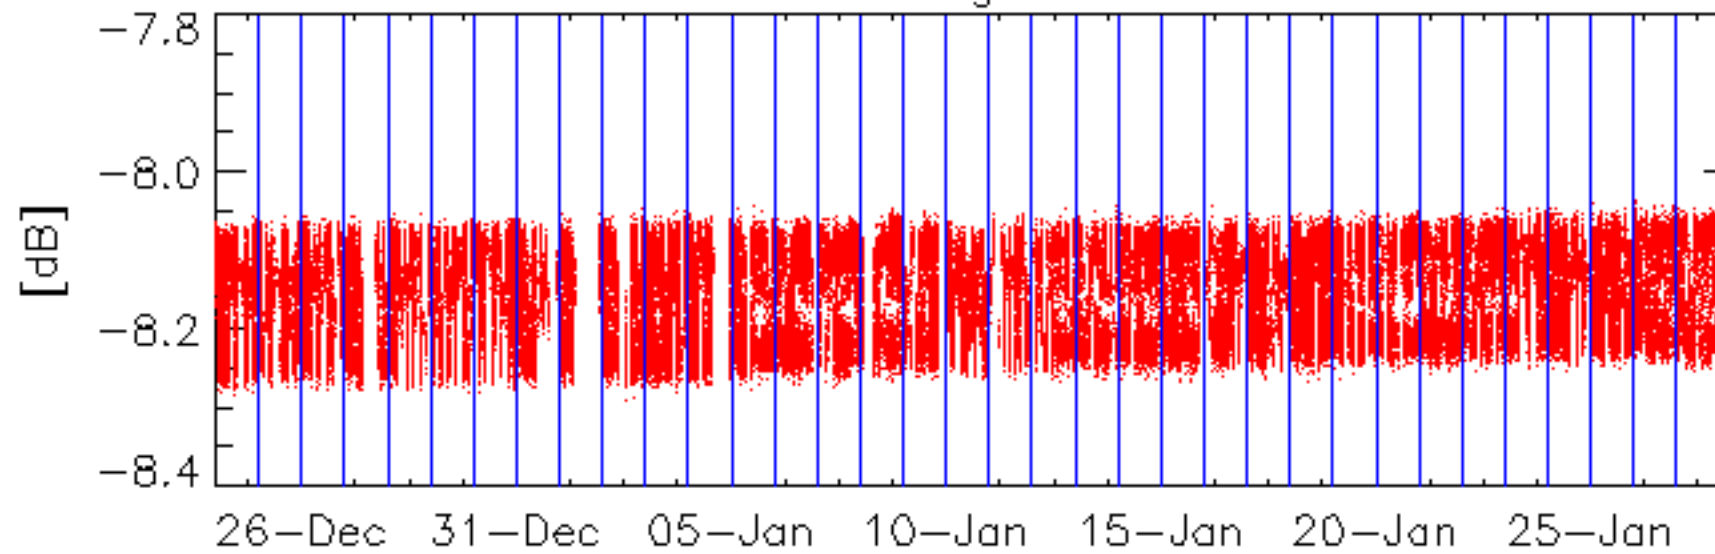
Average P1 (row 3 & row 24)

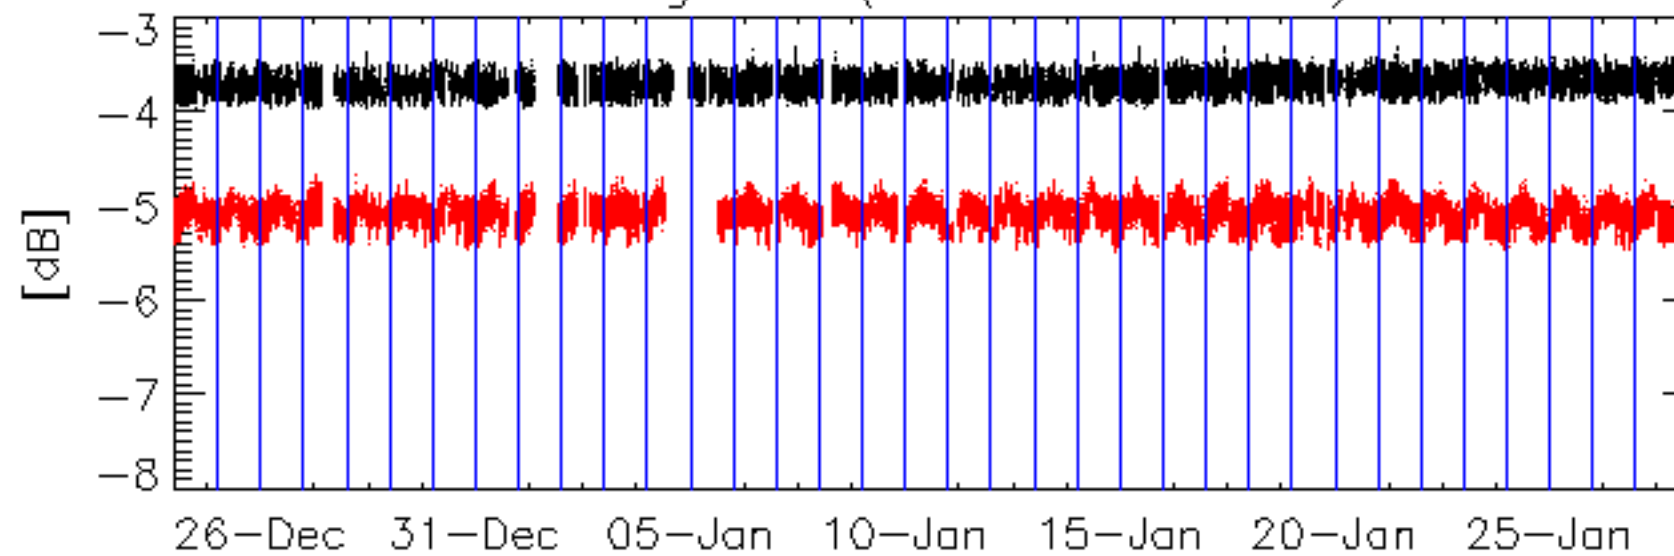


Average P2

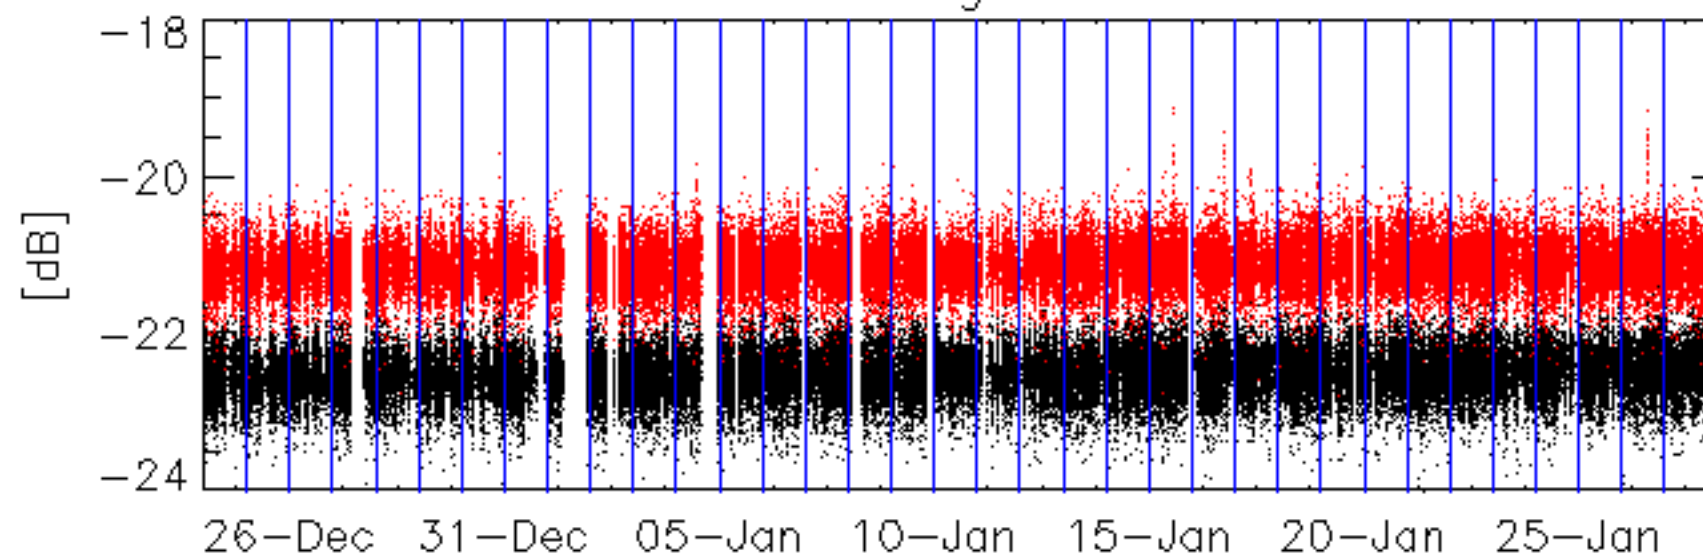

Average P3




Average P1 (row 3 & row 24)

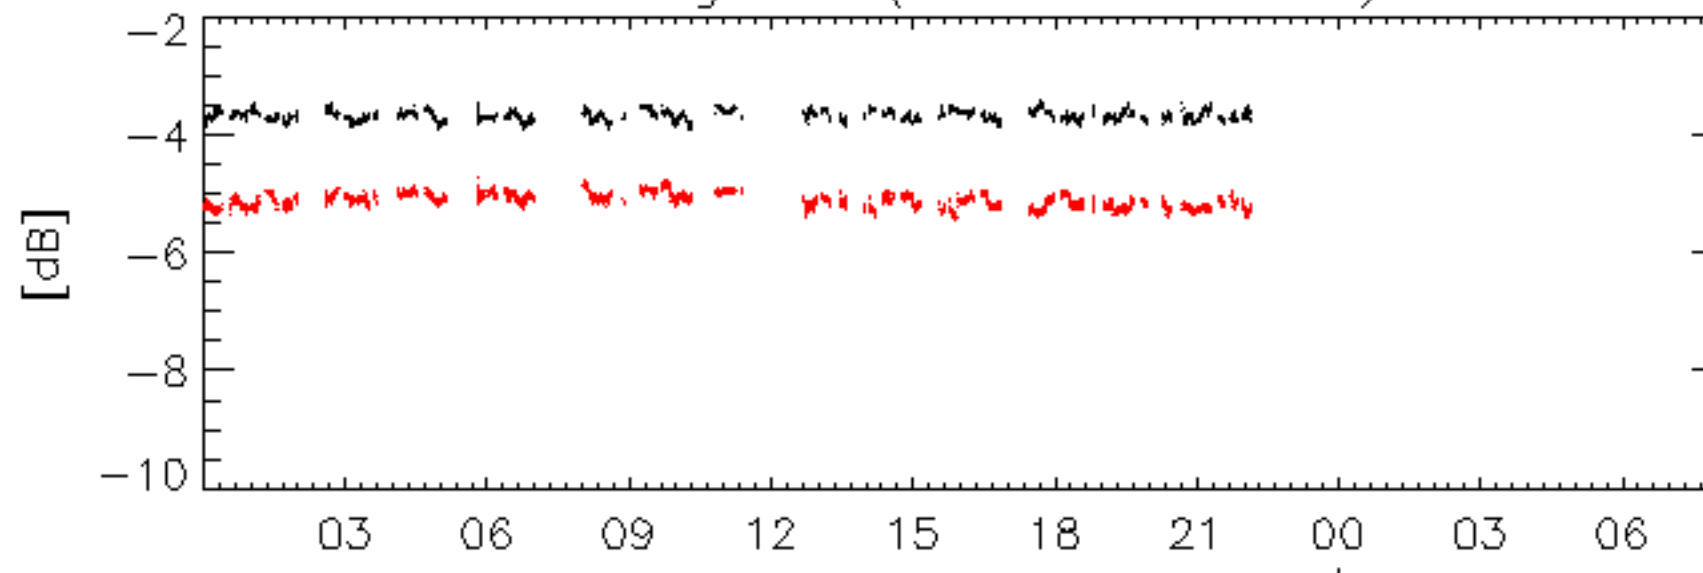


28-Jan

Average P2

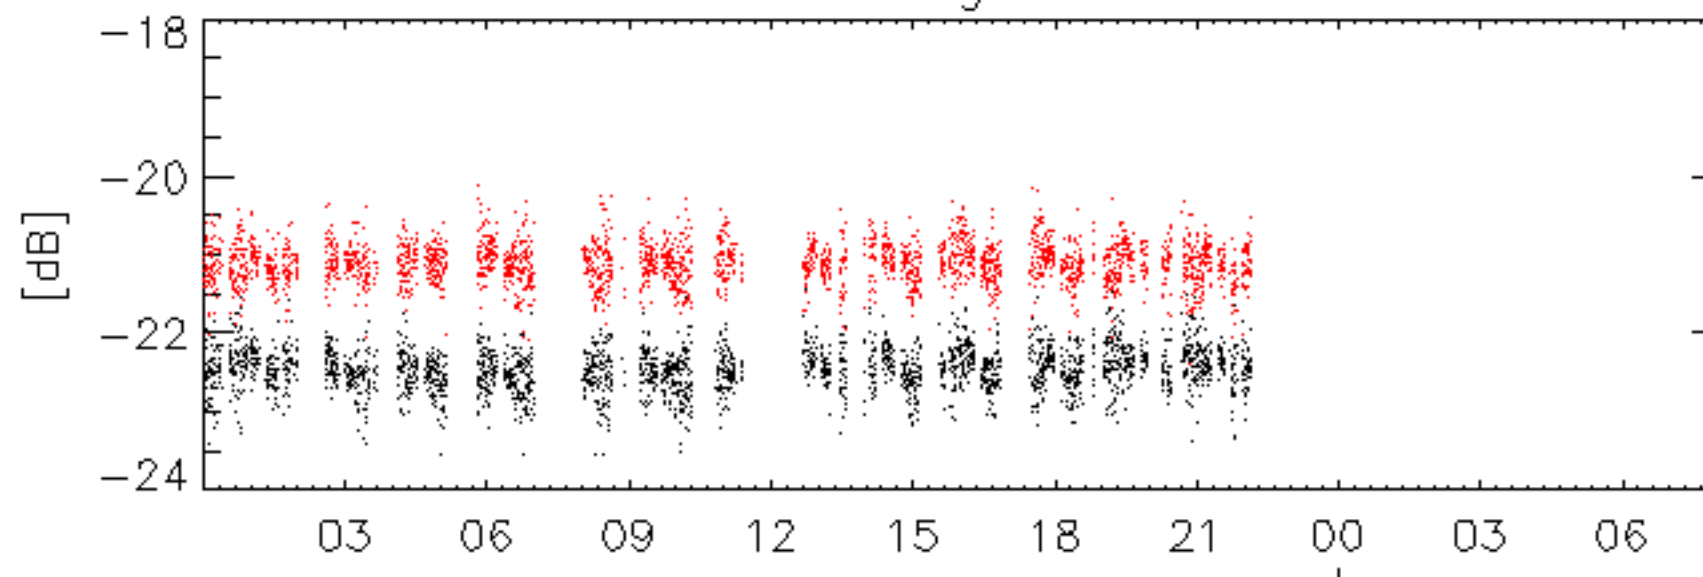

28-Jan


Average P3

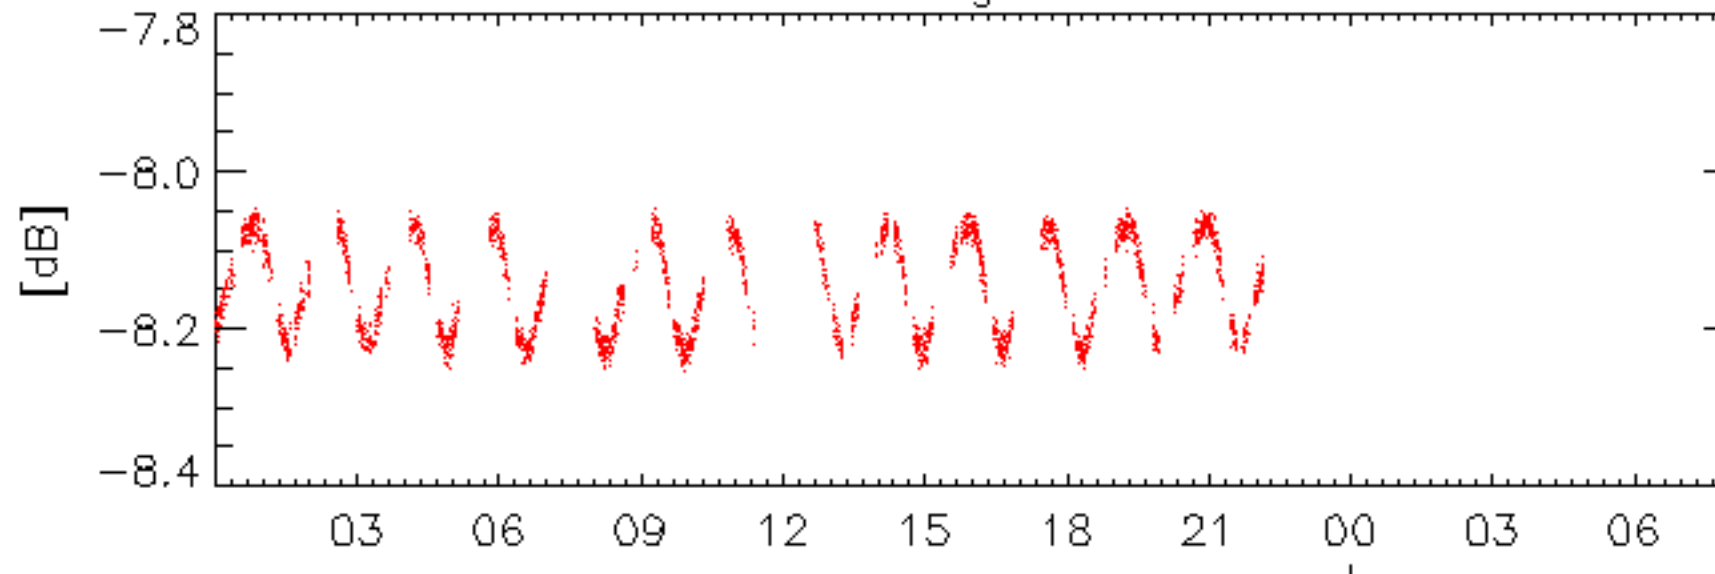

28-Jan


No anomalies observed on available browse products

No anomalies observed.

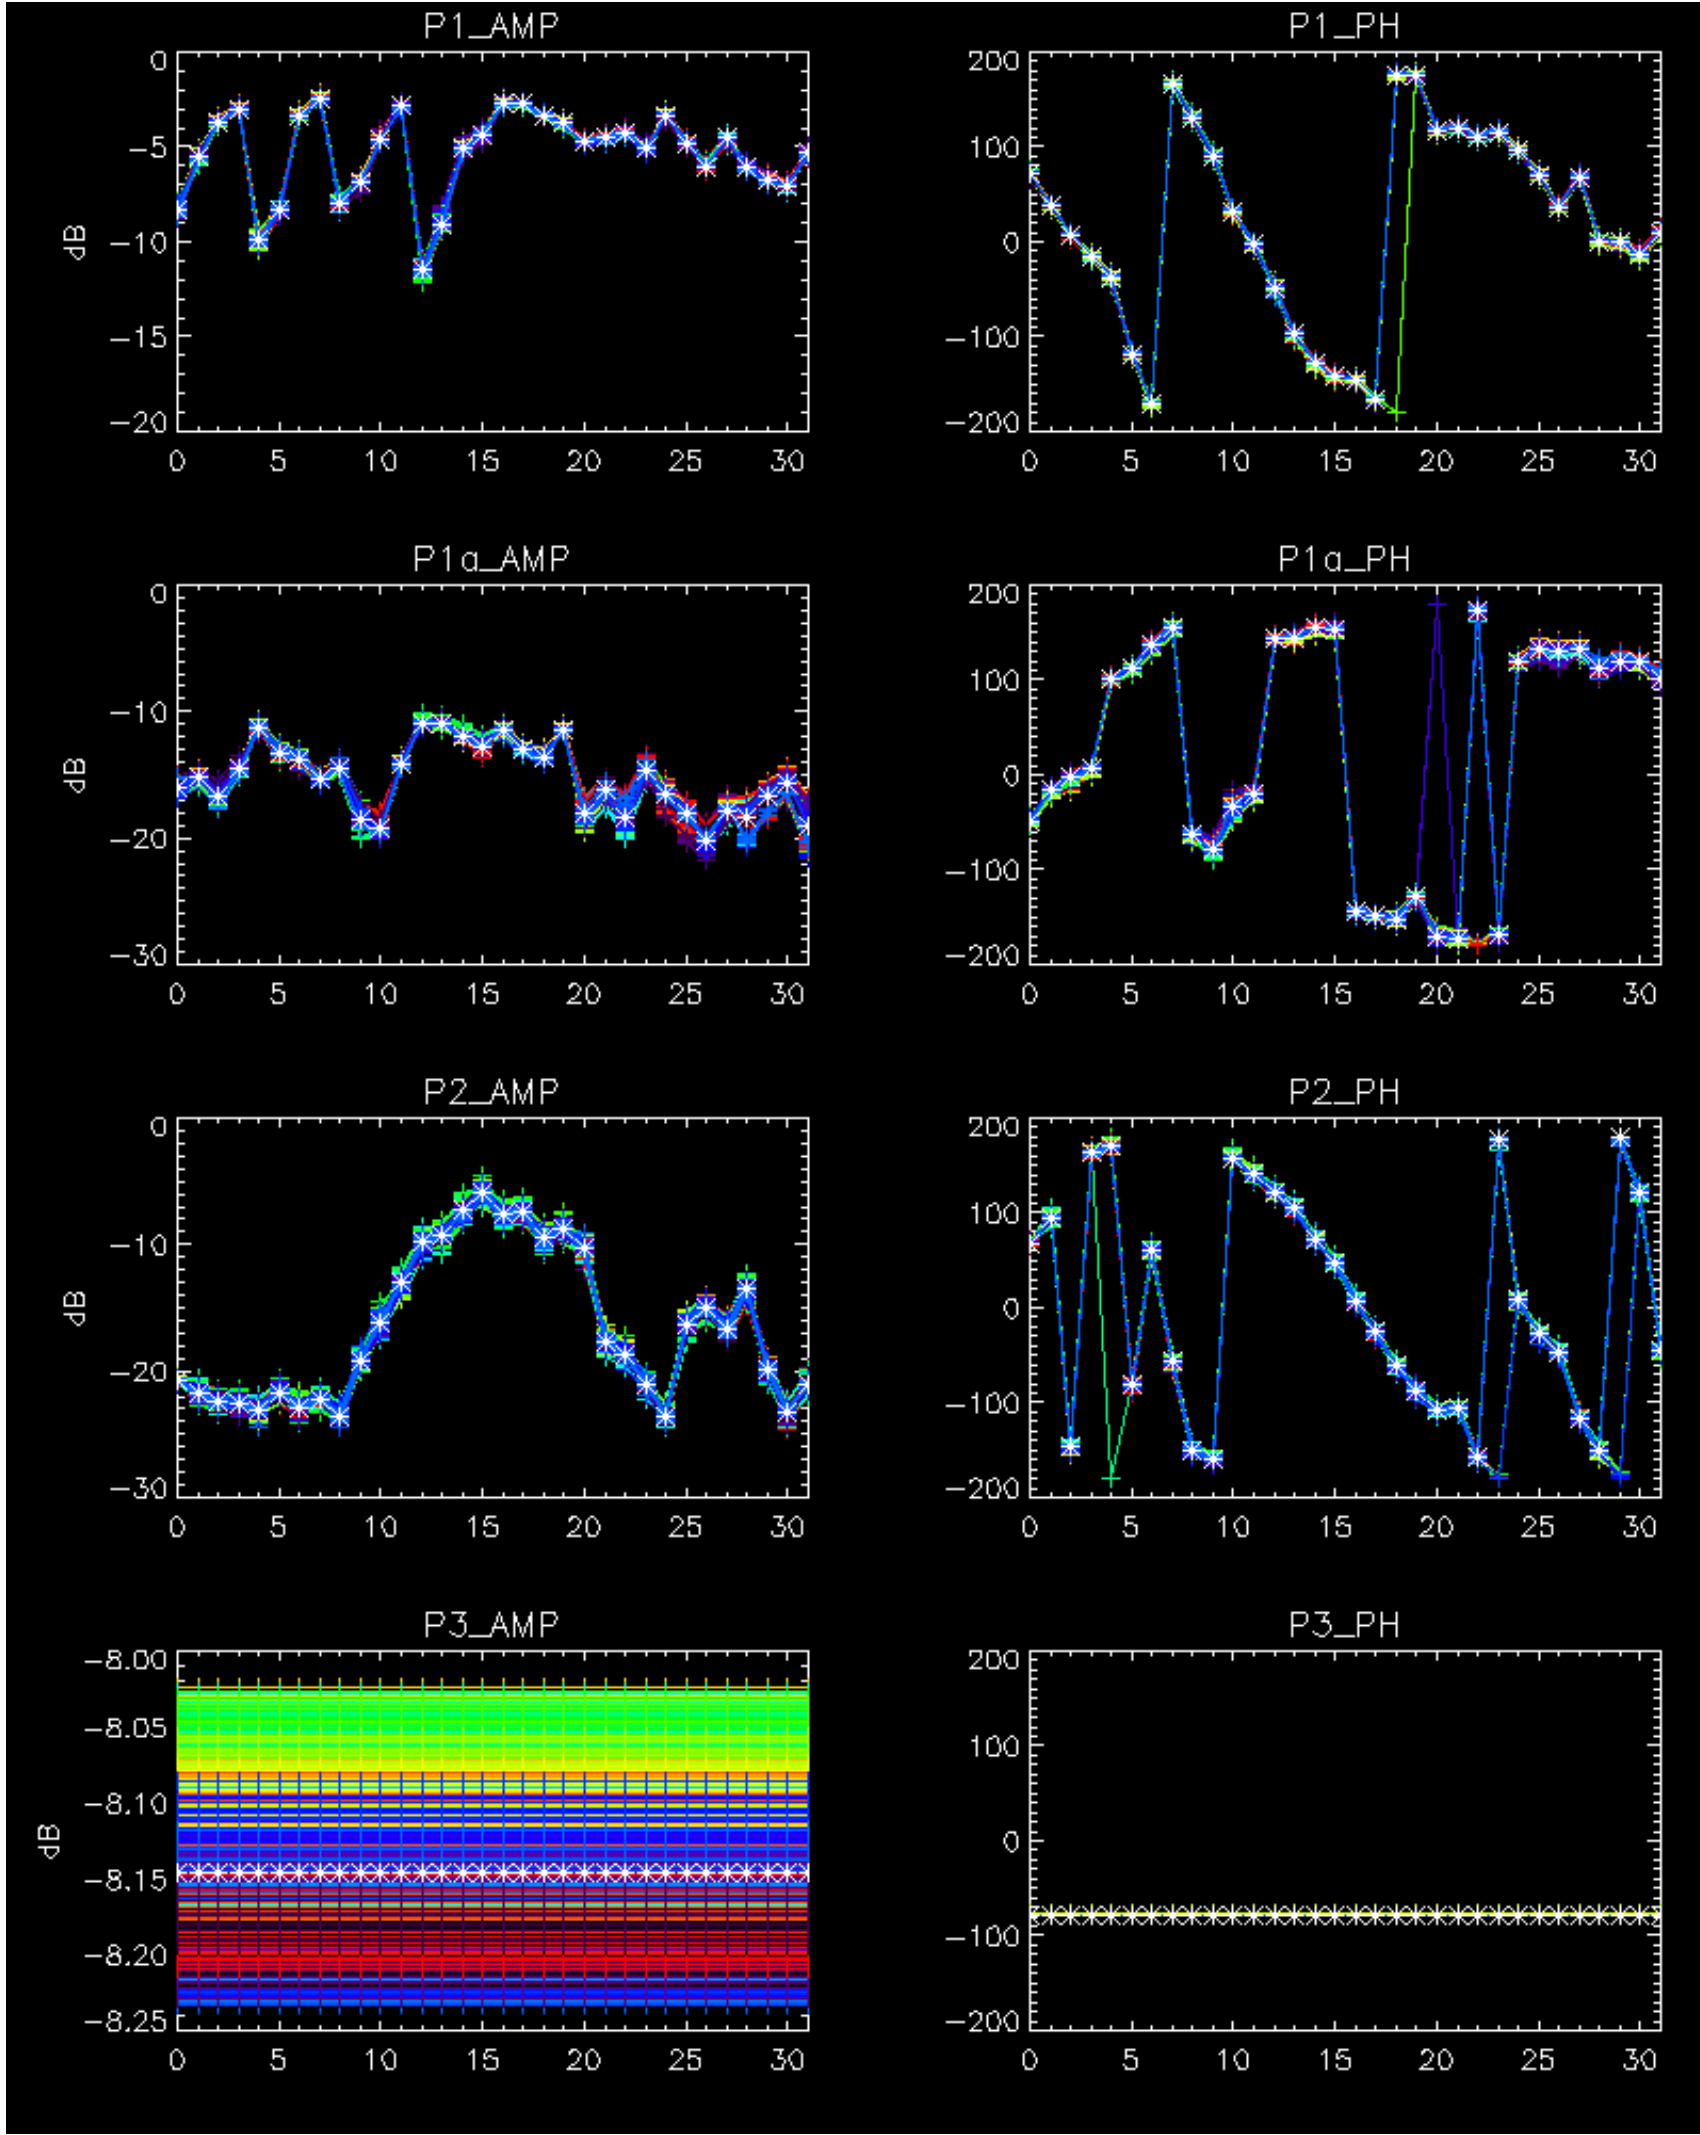




- Stable wave internal calibration pulses gain and phase.
- Stable raw data statistics.
- Nominal Doppler behavior.

Doppler 'WVS' 'IS2' 'H/H'

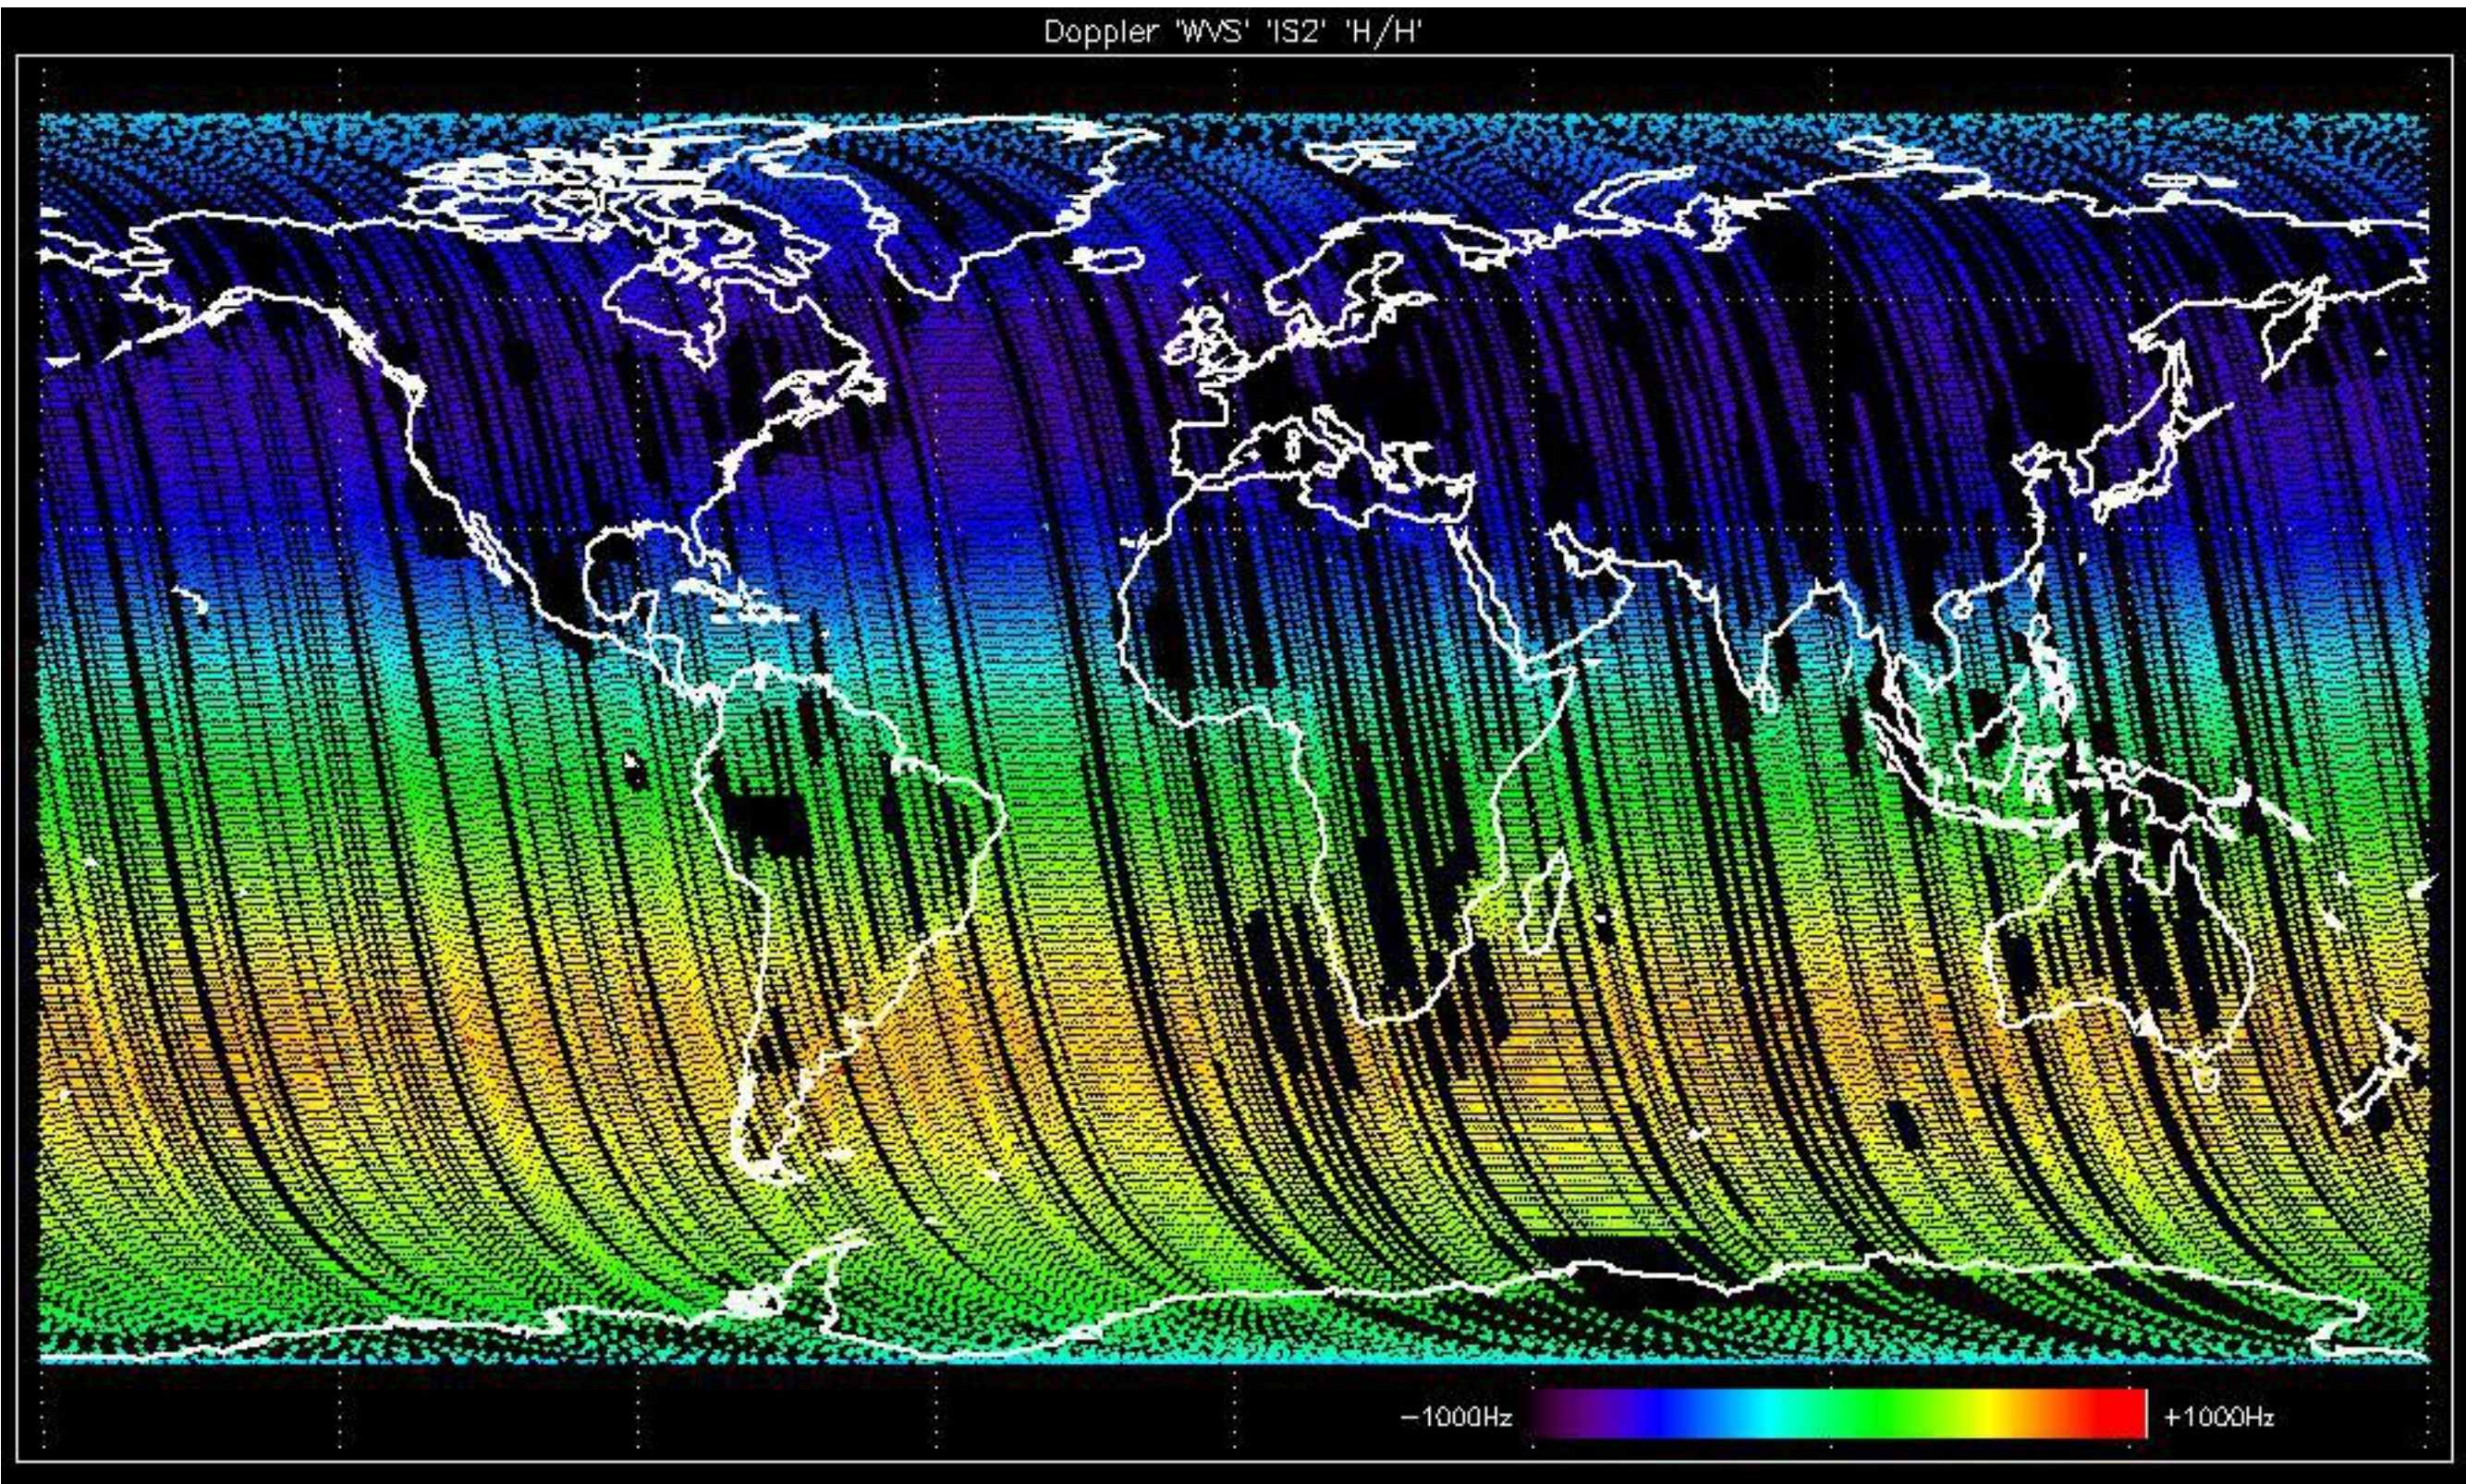


Doppler 'WVS' 'ISZ' 'V/V'

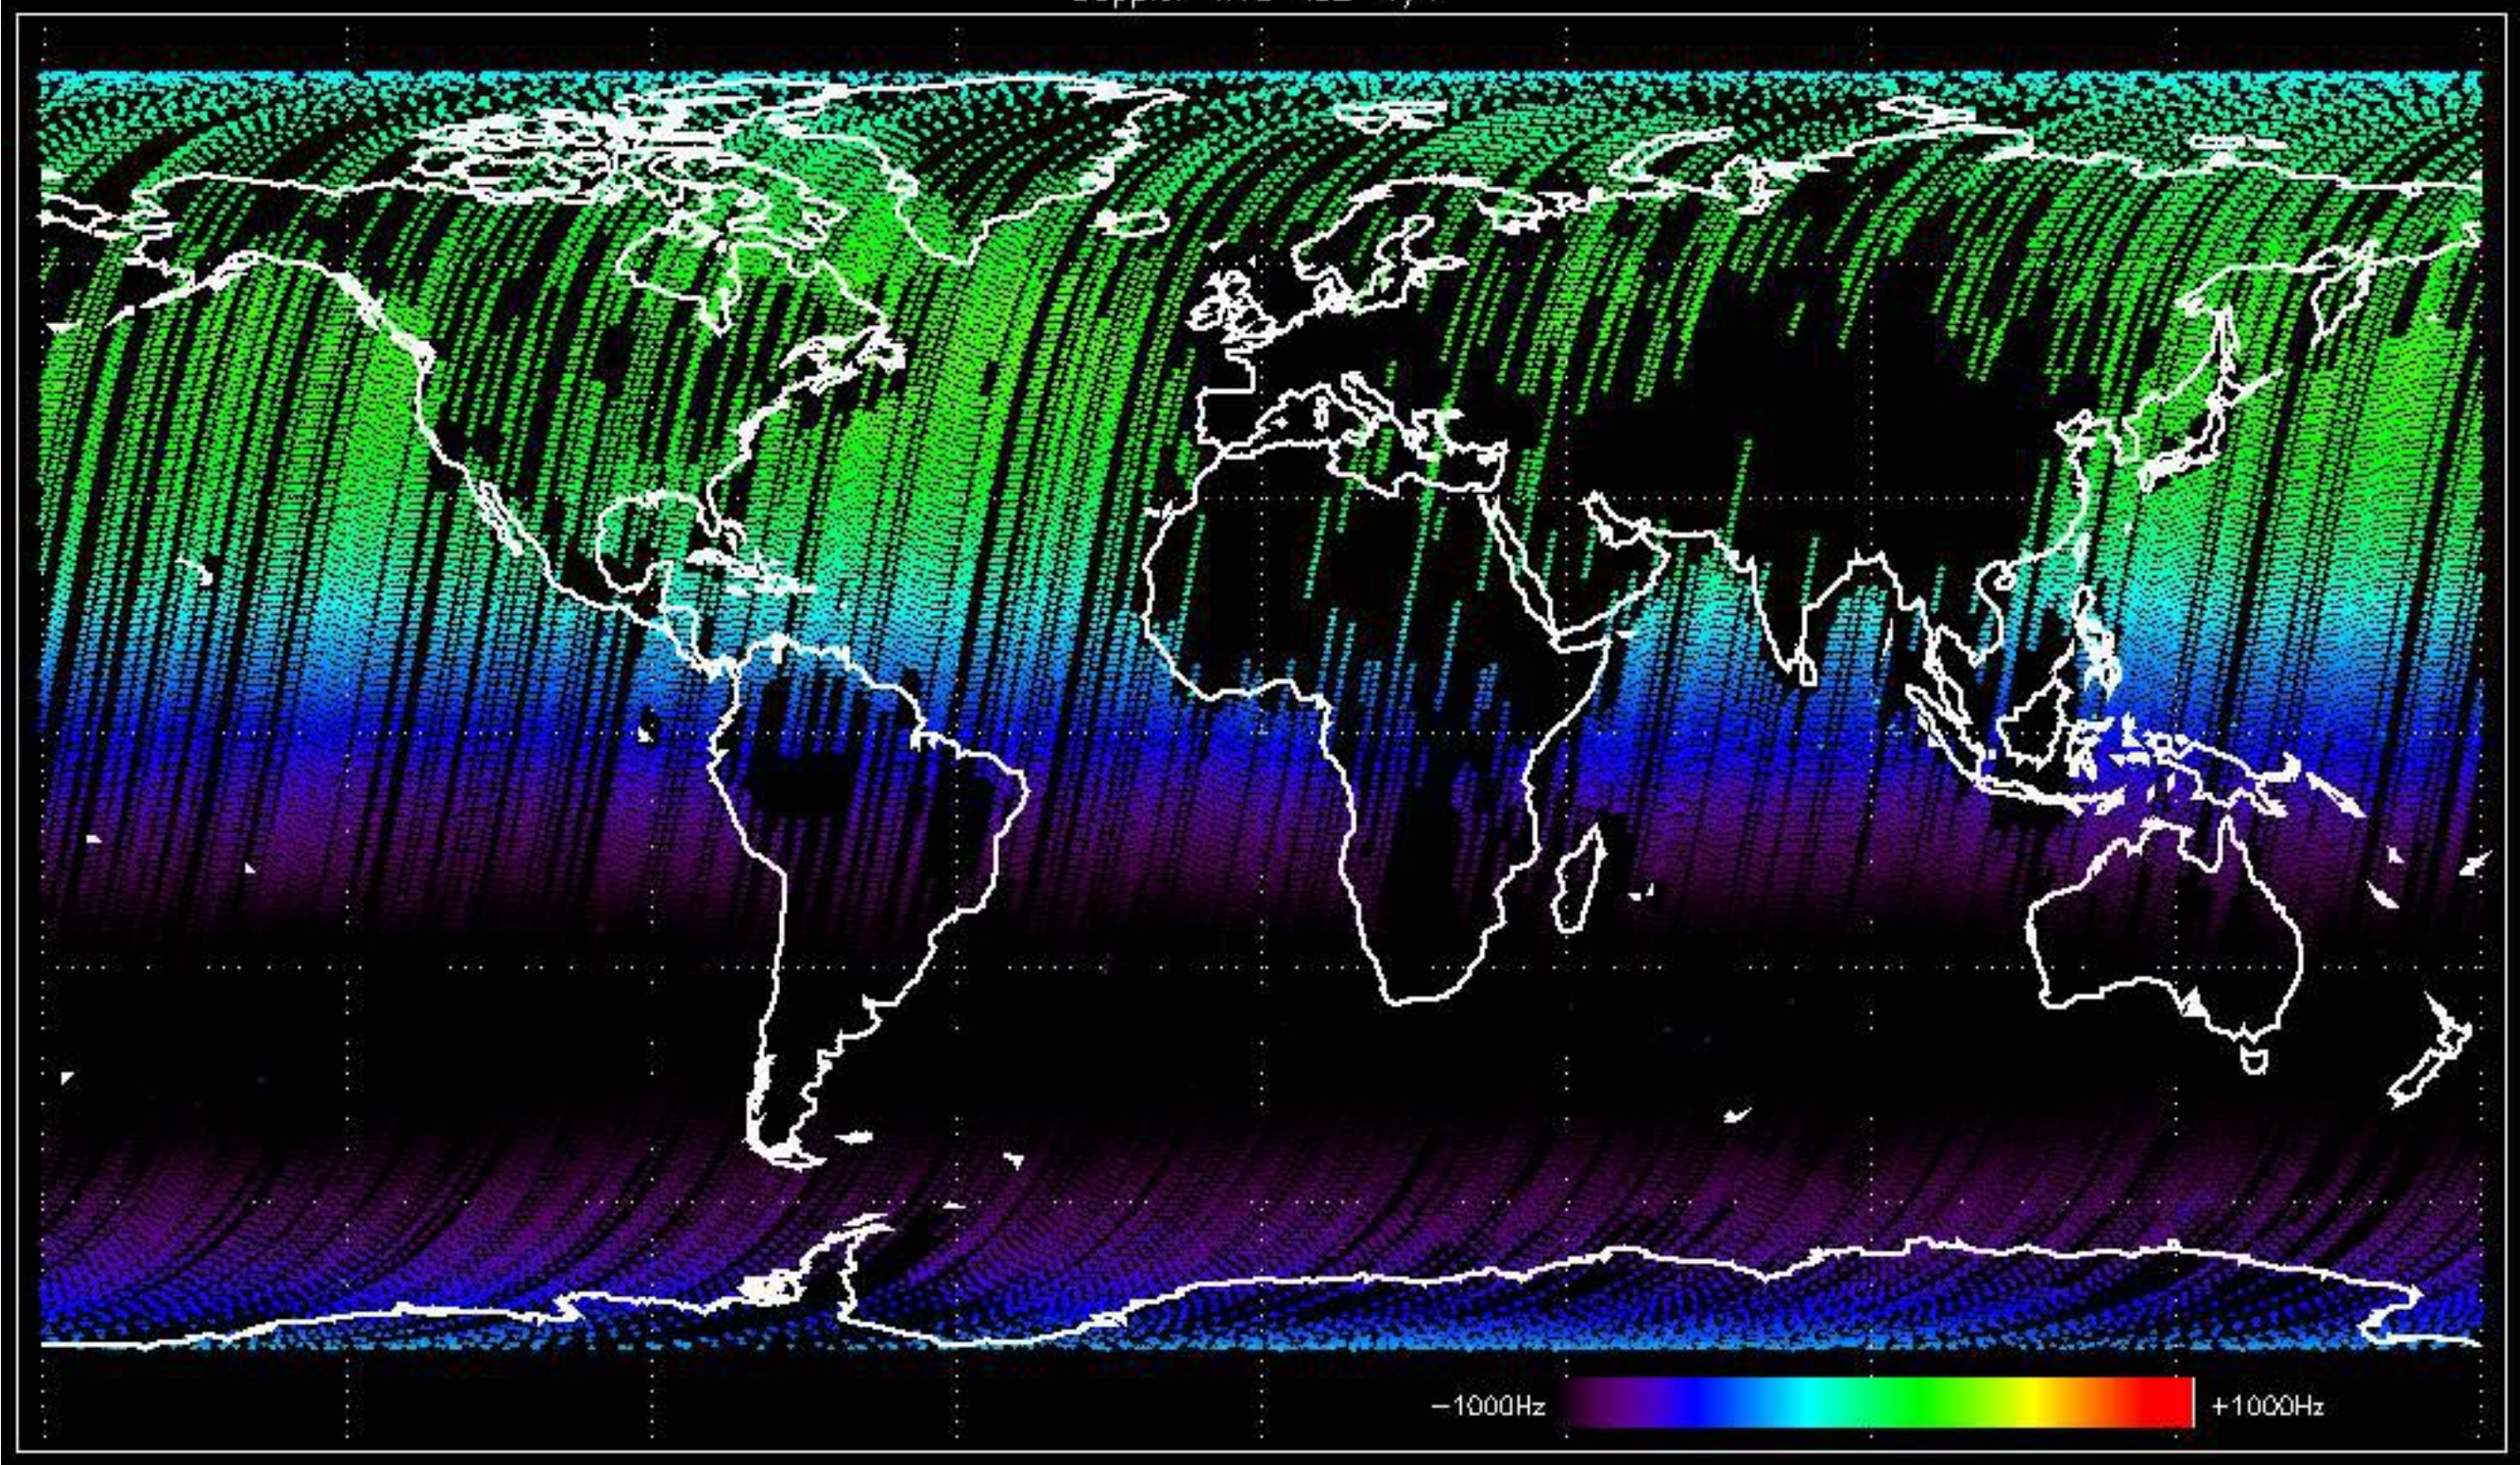


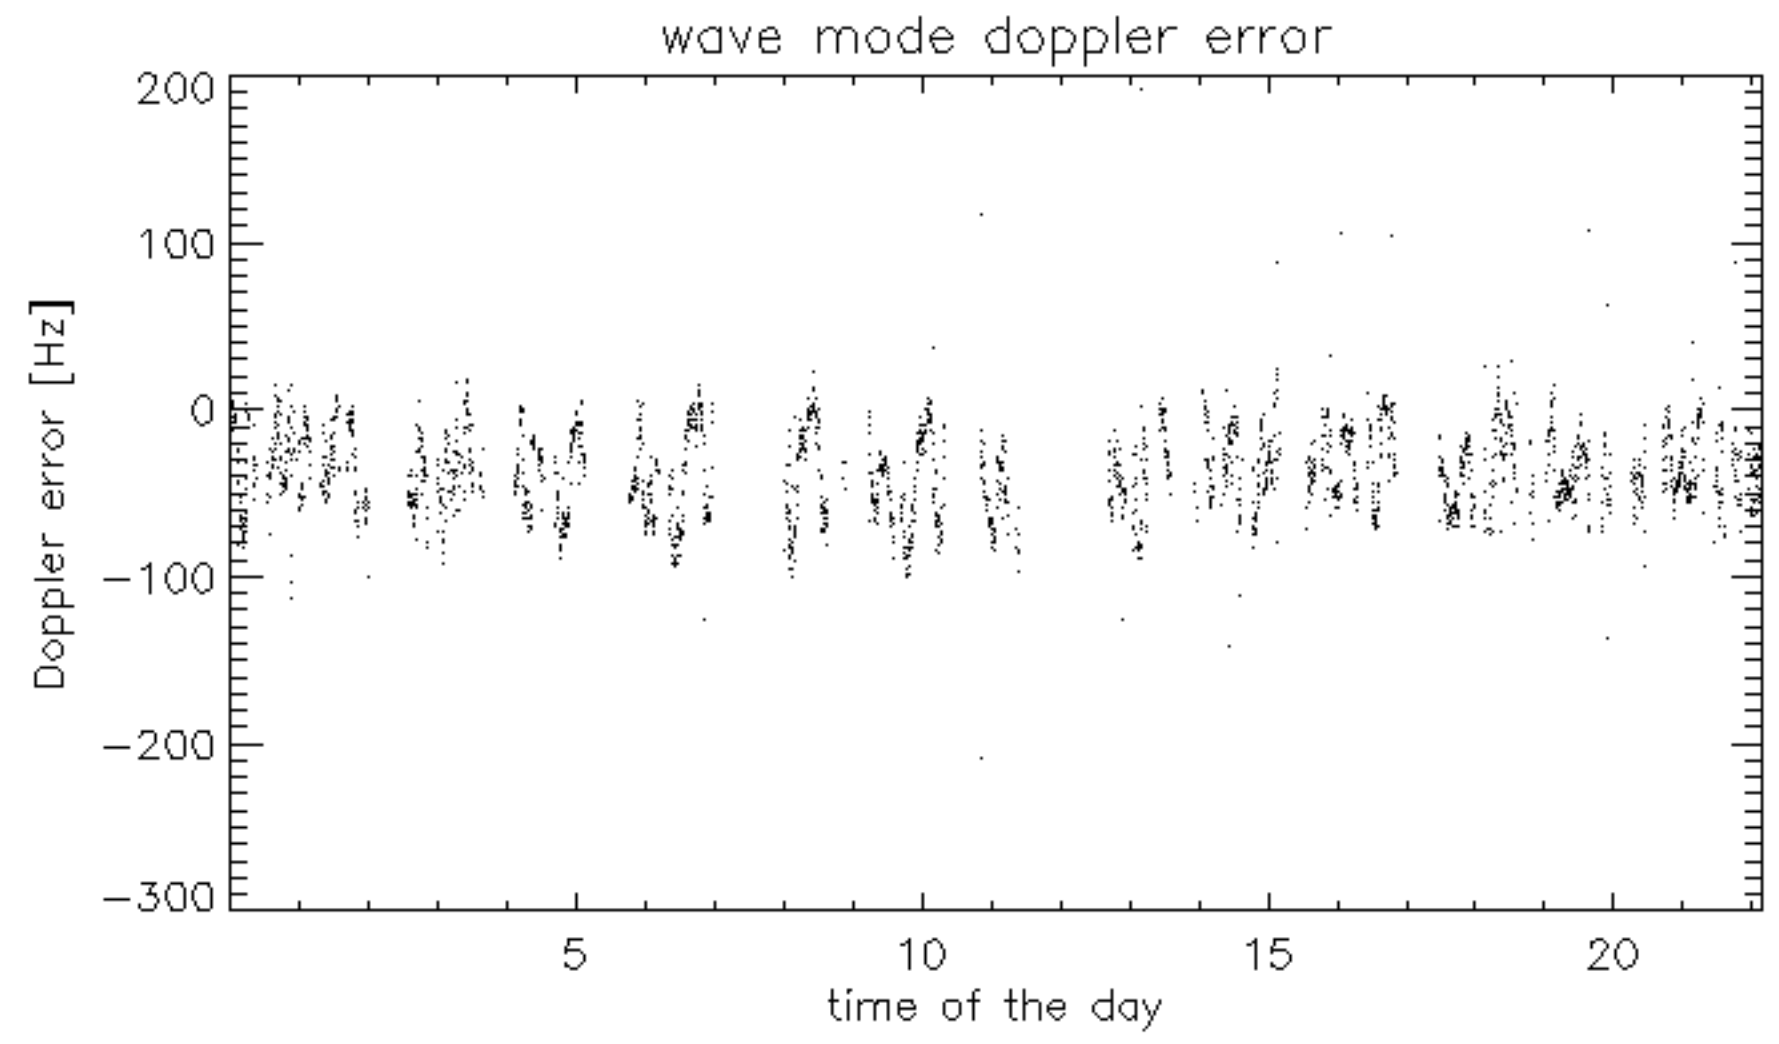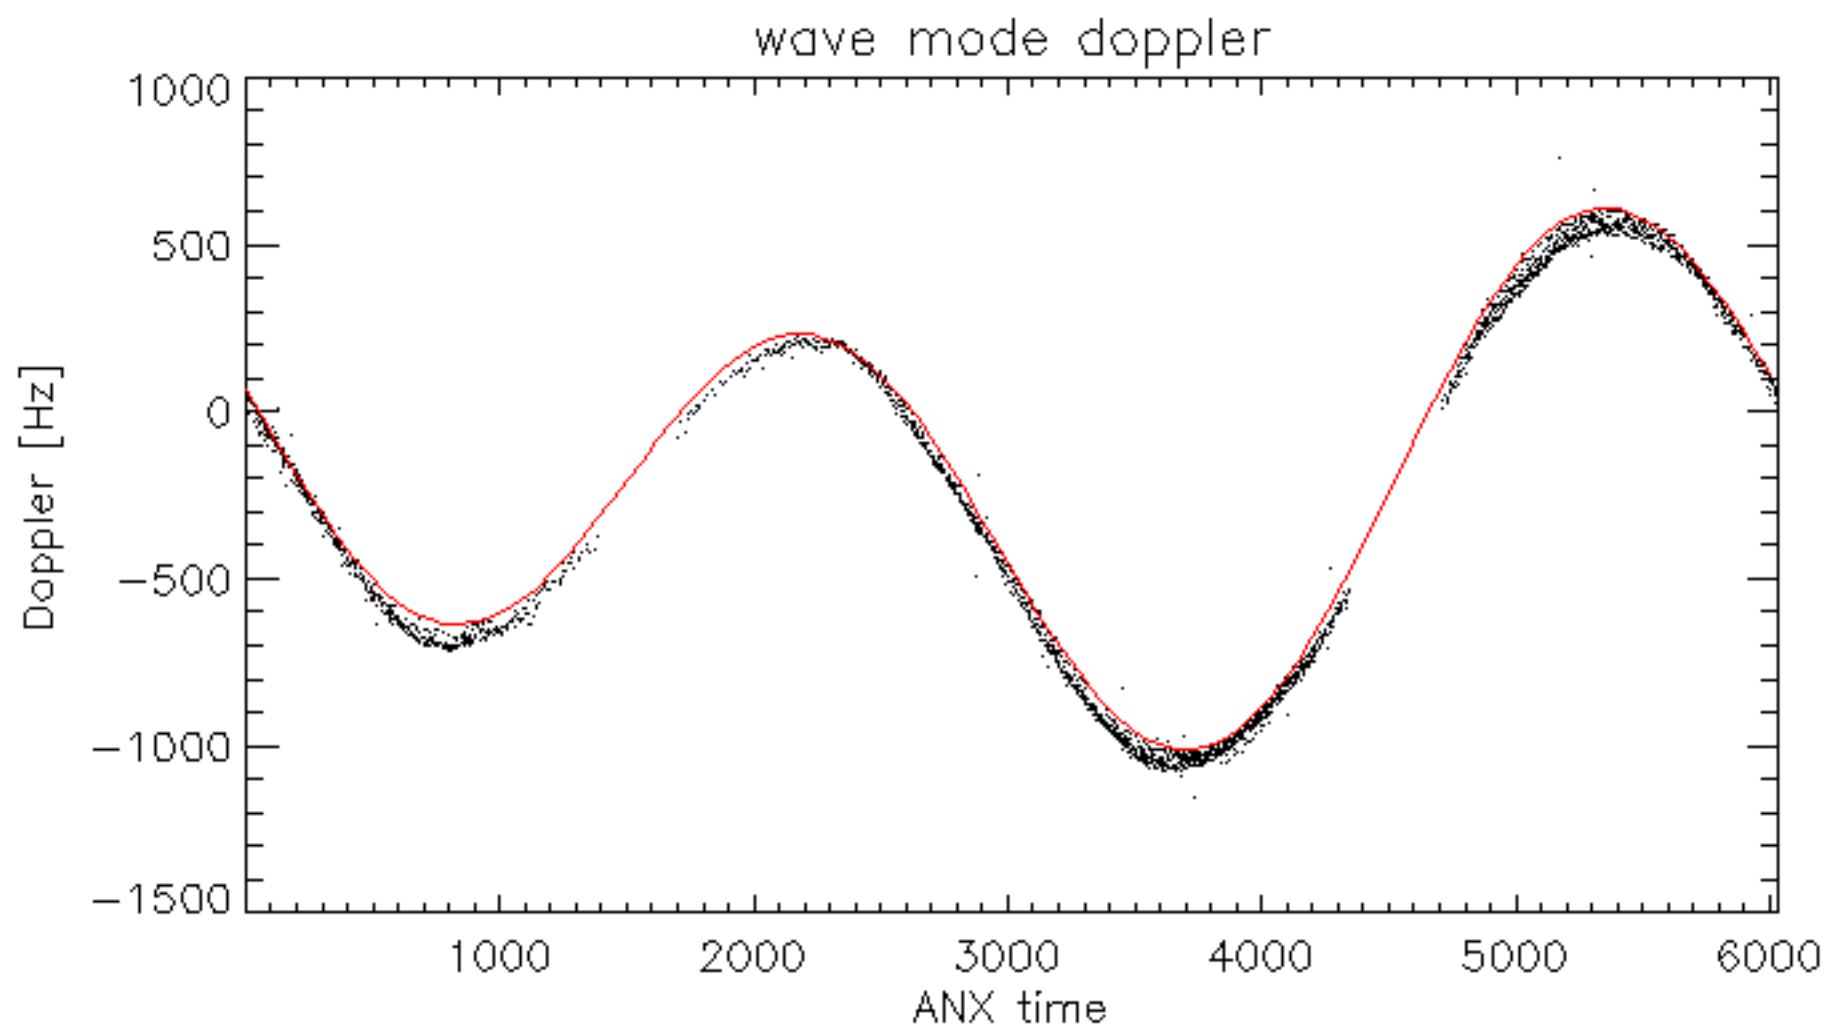

Doppler difference, estimated-predicted 'WVS' 'IS2' 'H/H' -error mean of -34.481263 Hz

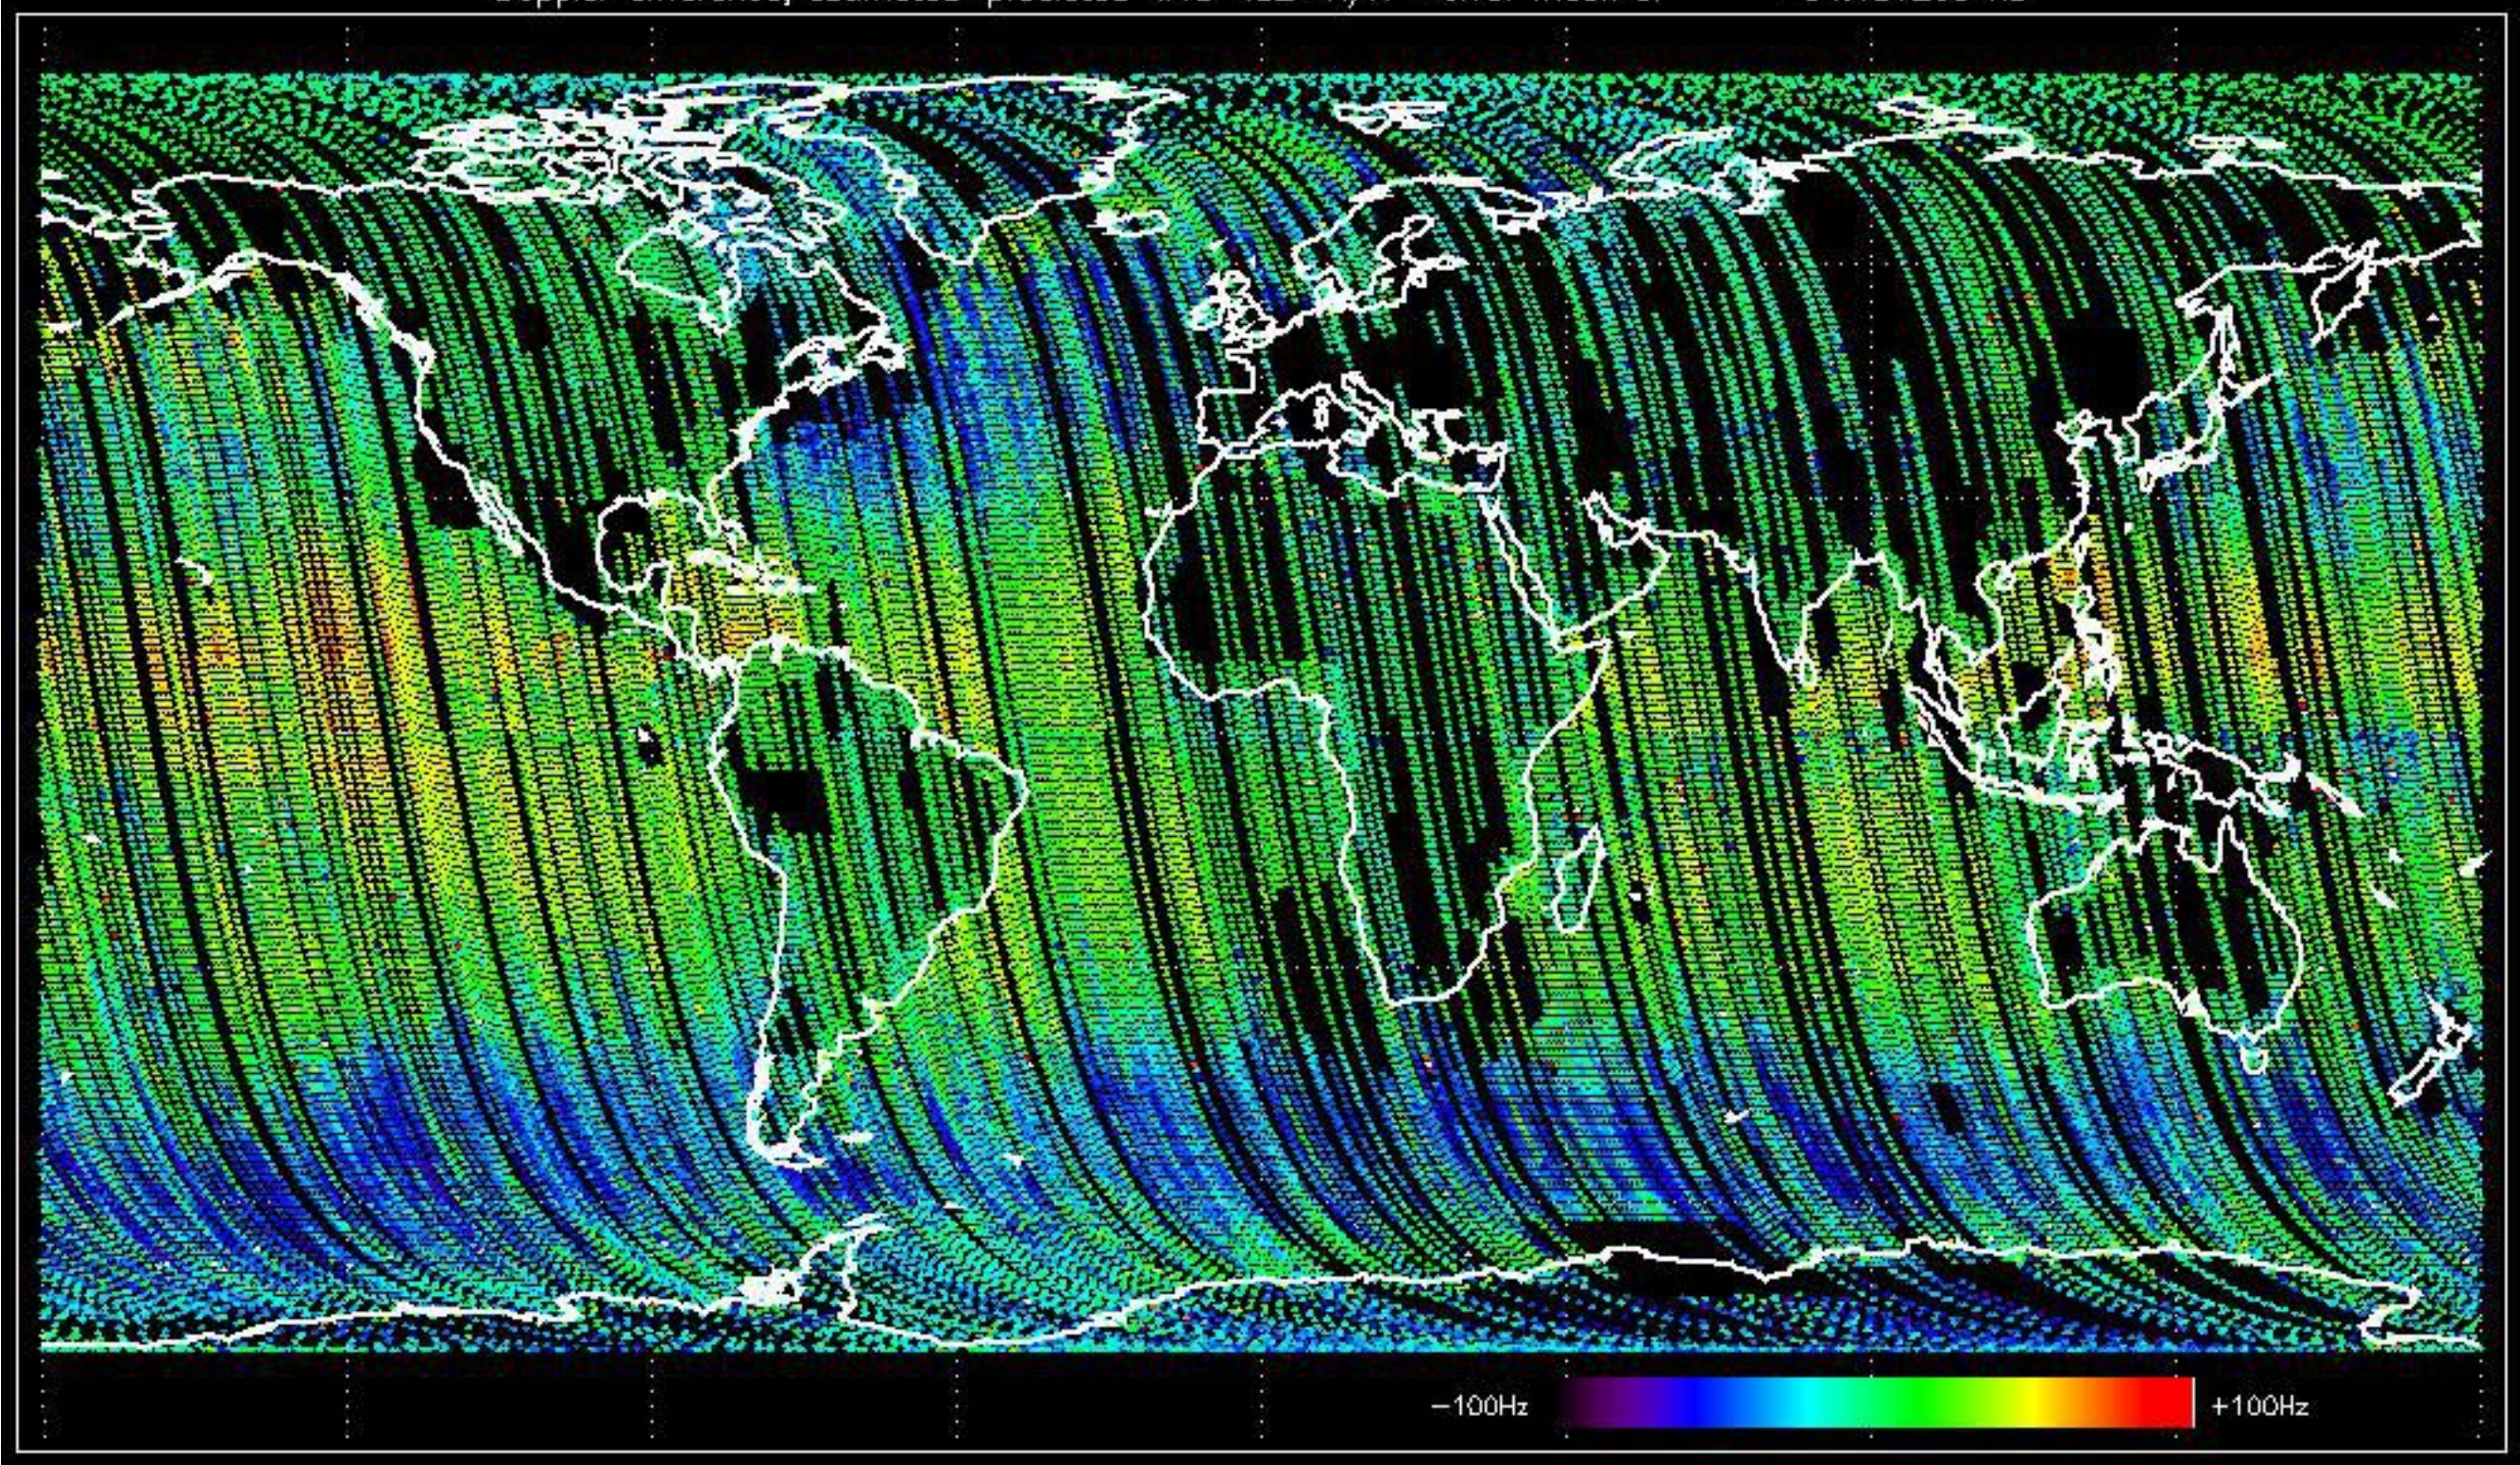





Doppler difference, estimated-predicted 'WVS' 'IS2' 'V/V' -error mean of -33.611557 Hz



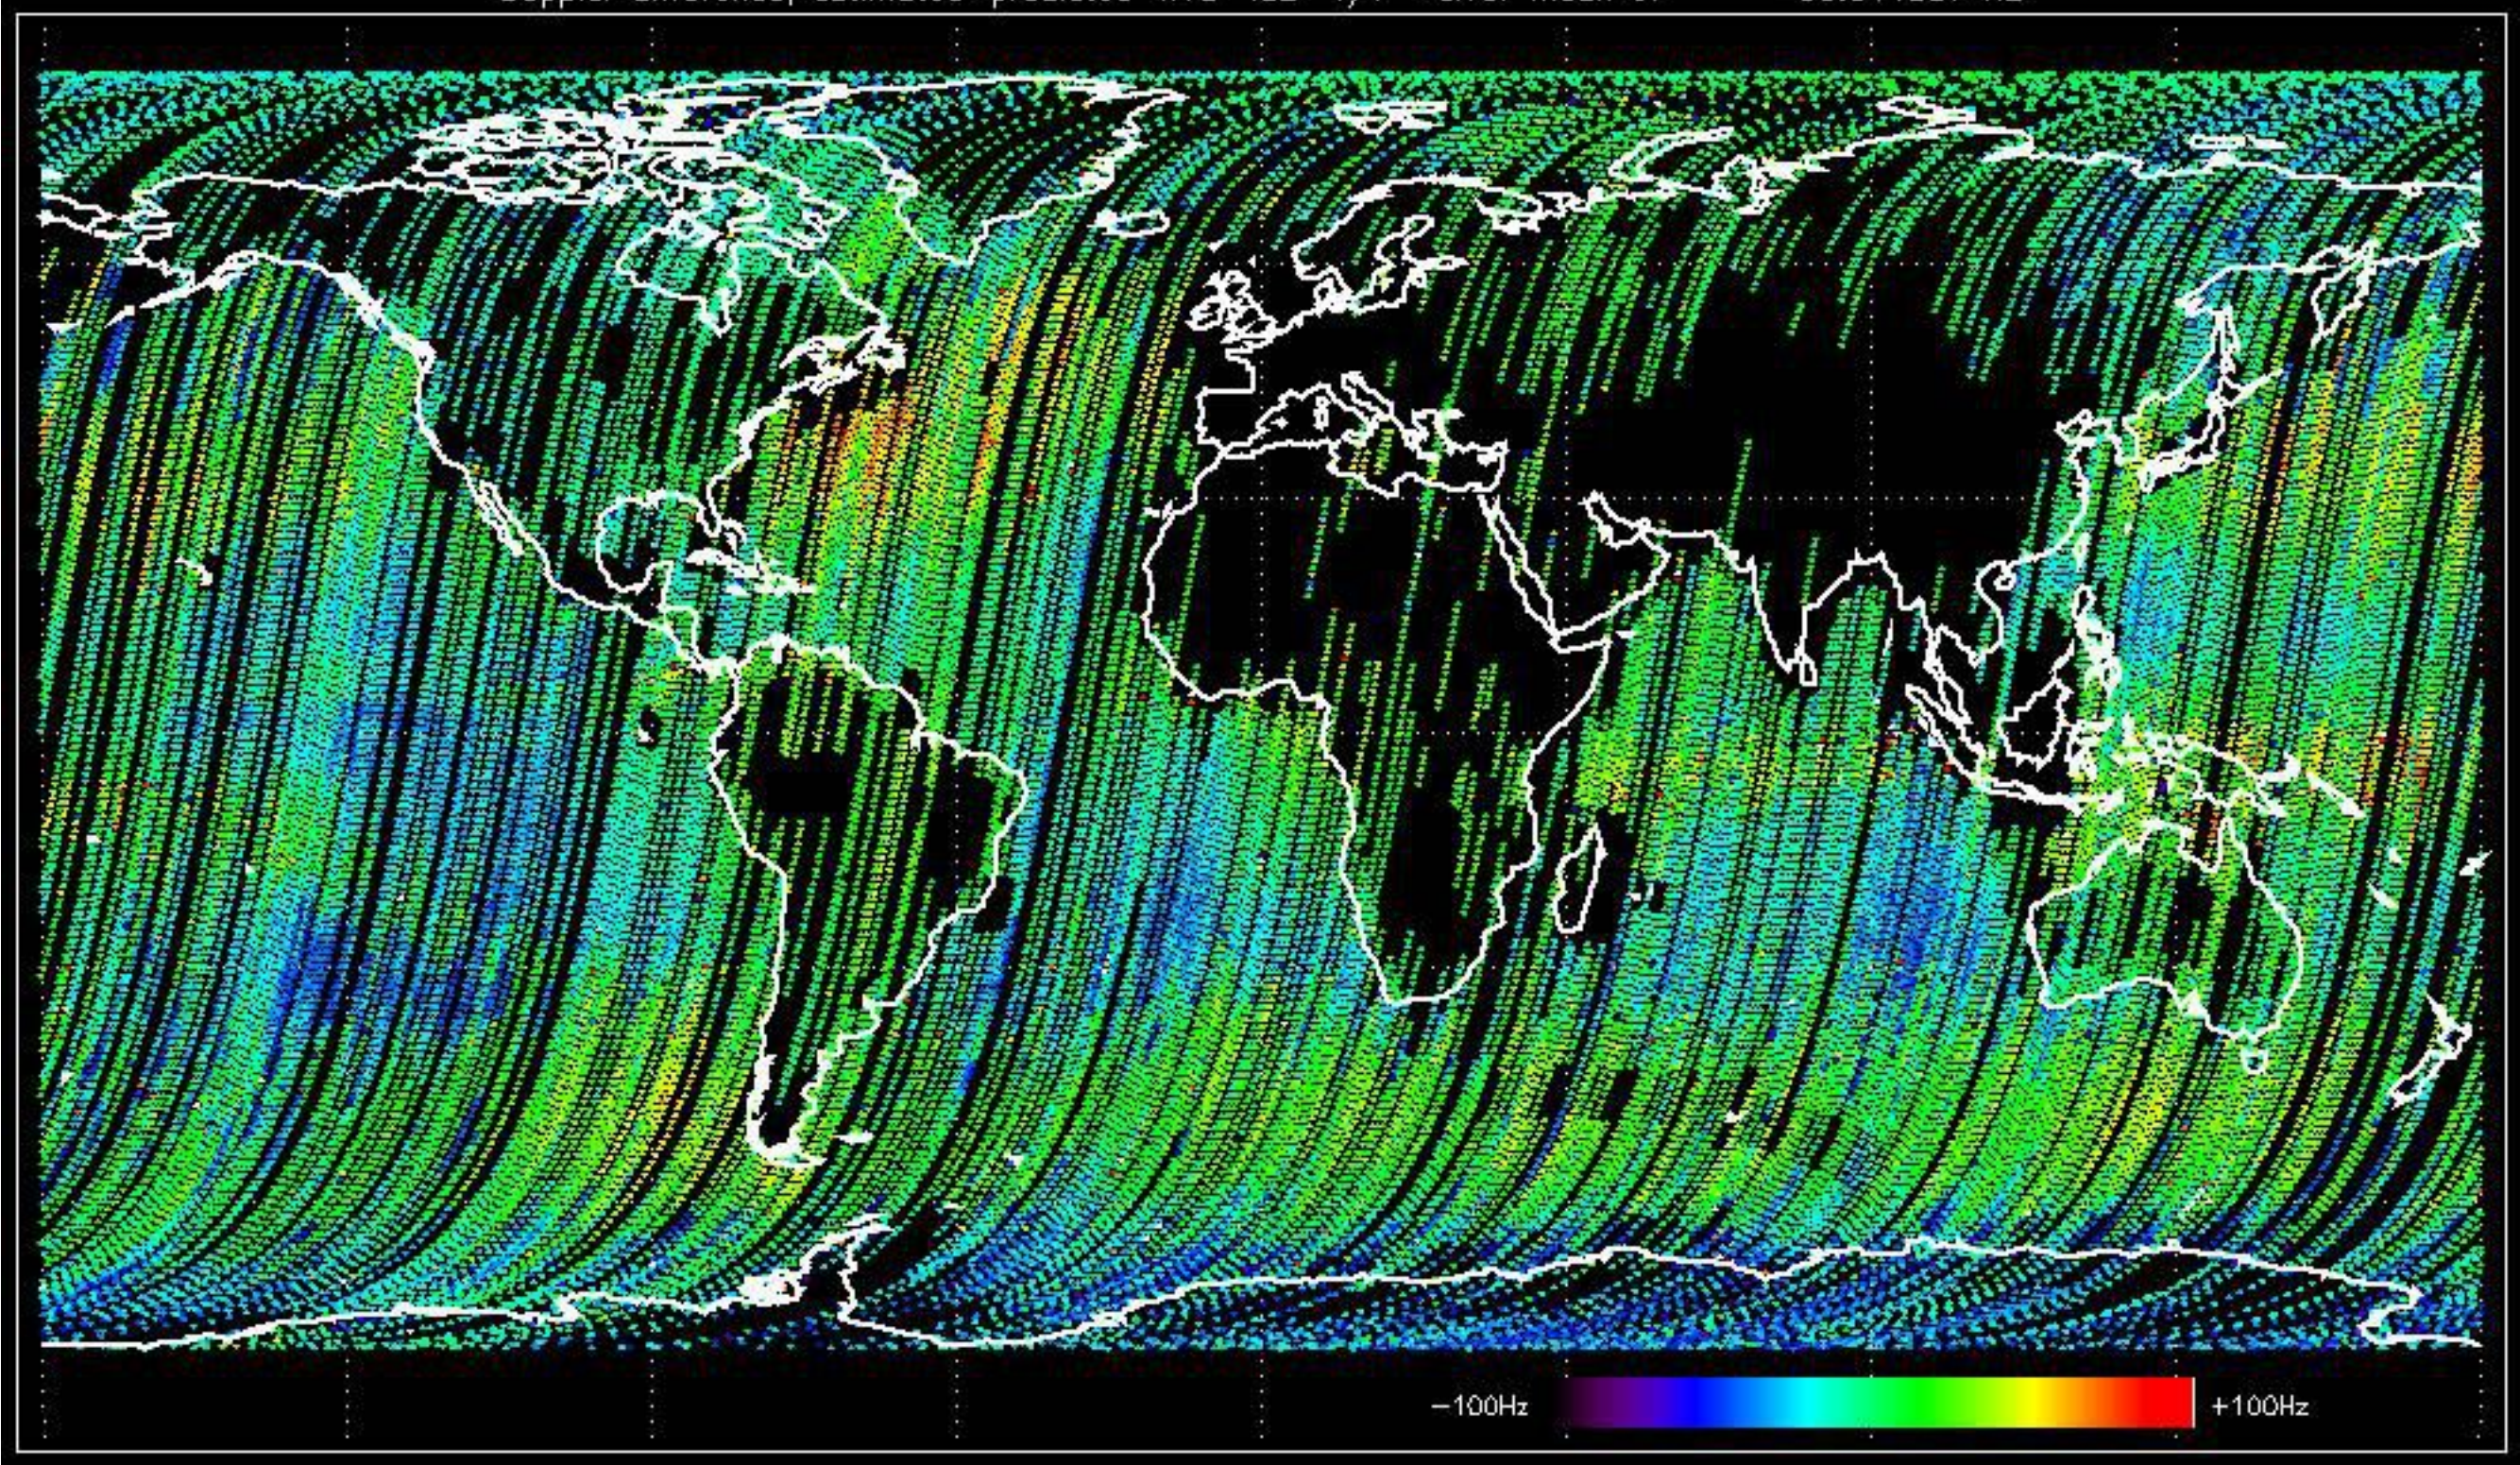


The MS mode provides an internal health check on an individual module basis.
The purpose of this mode is to identify to identify any malfunctioning modules and
to identify modules for which calibration offsets are to be applied.
No anomalies observed on available MS products:

No anomalies observed.

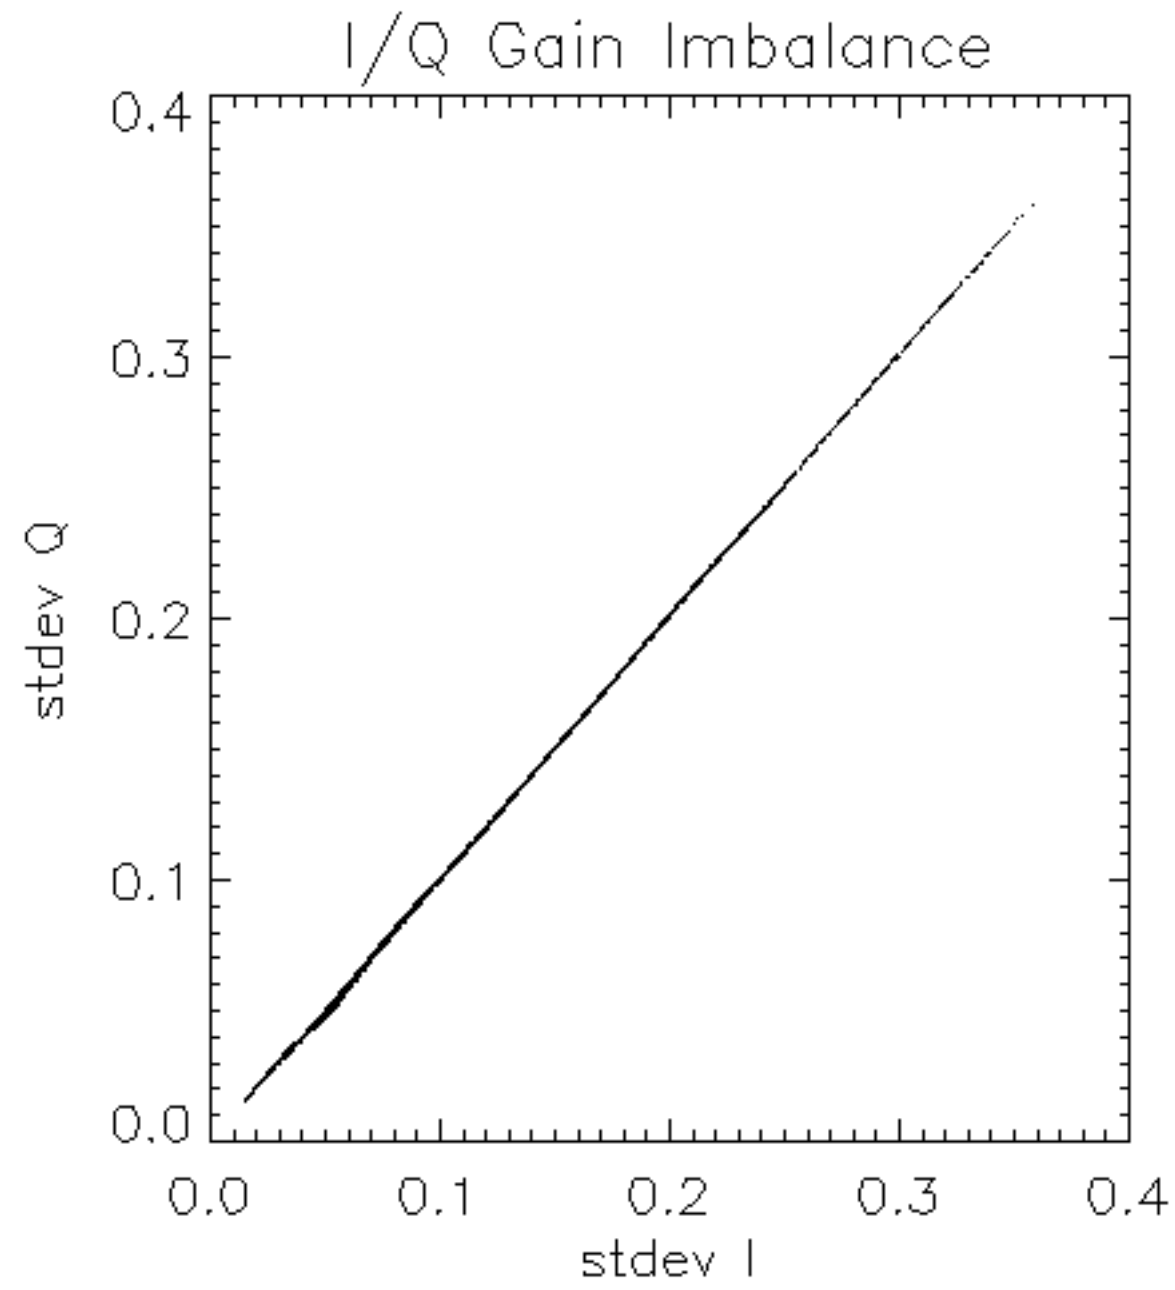

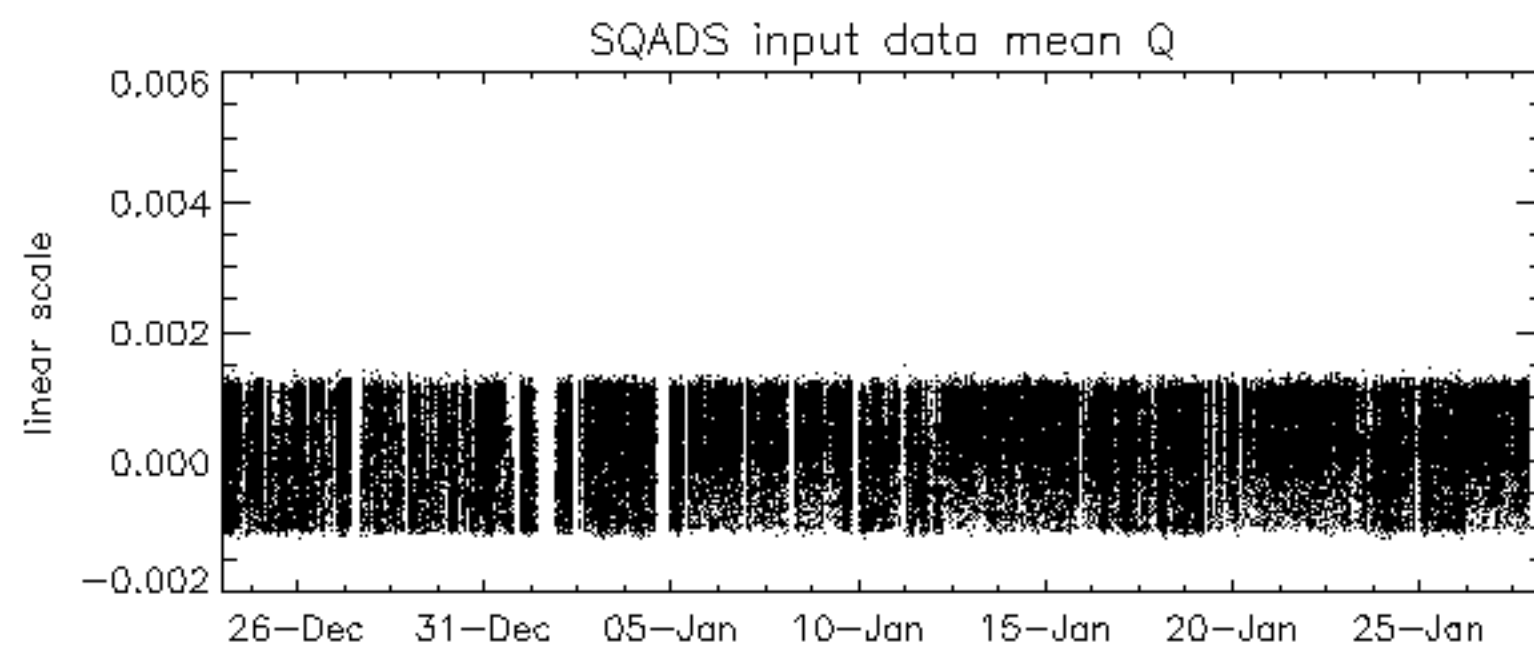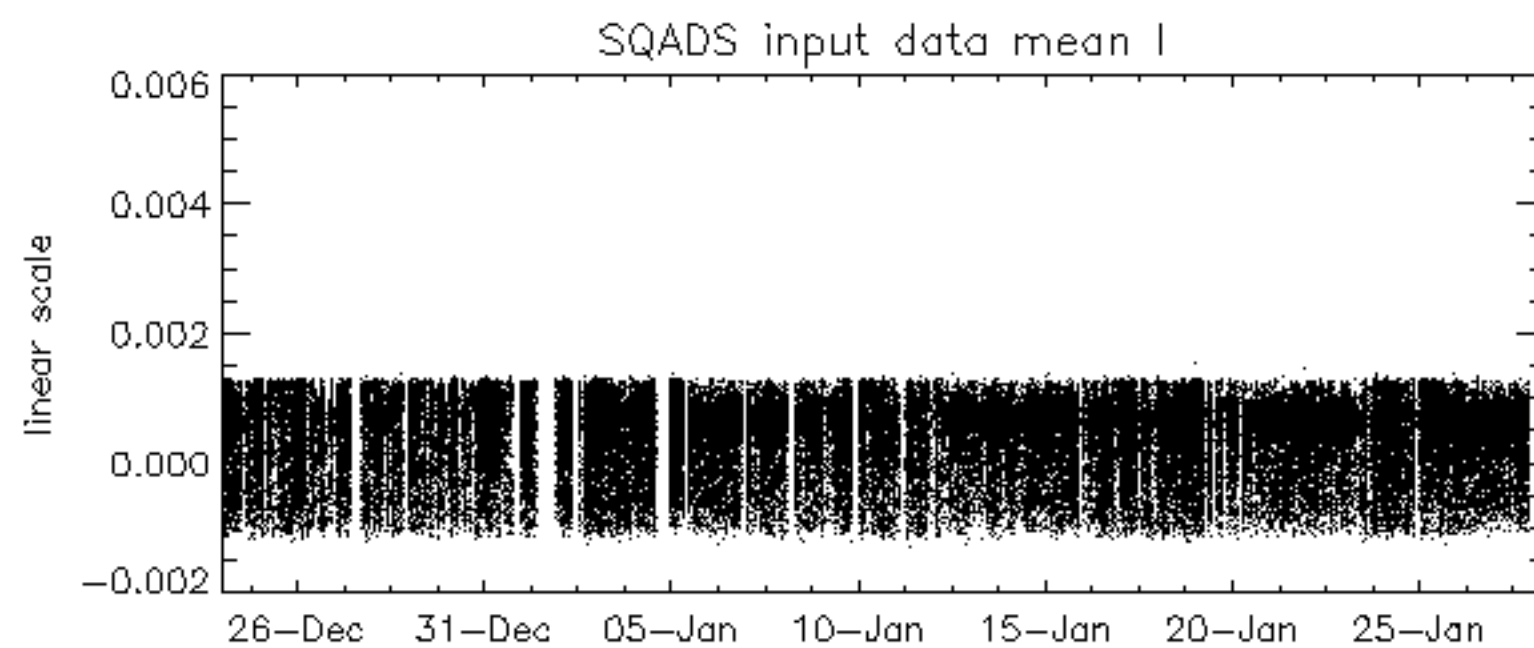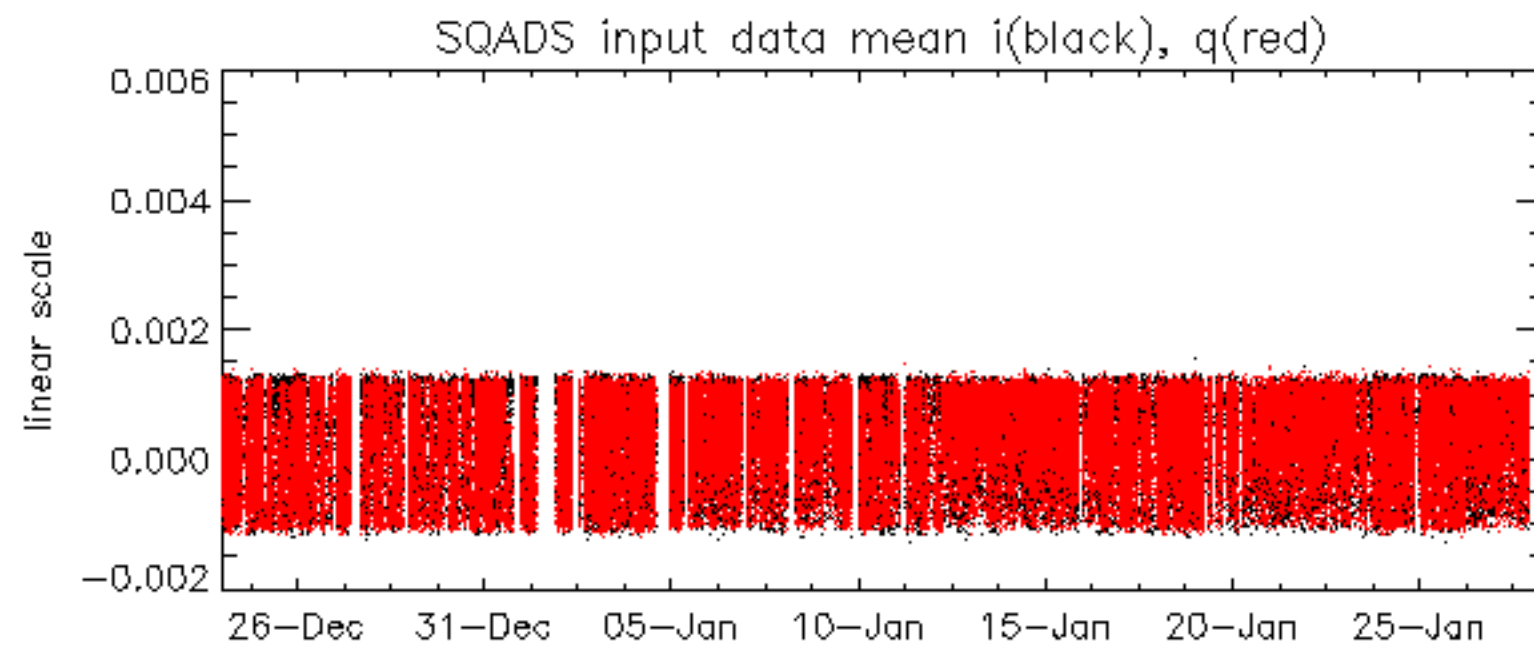

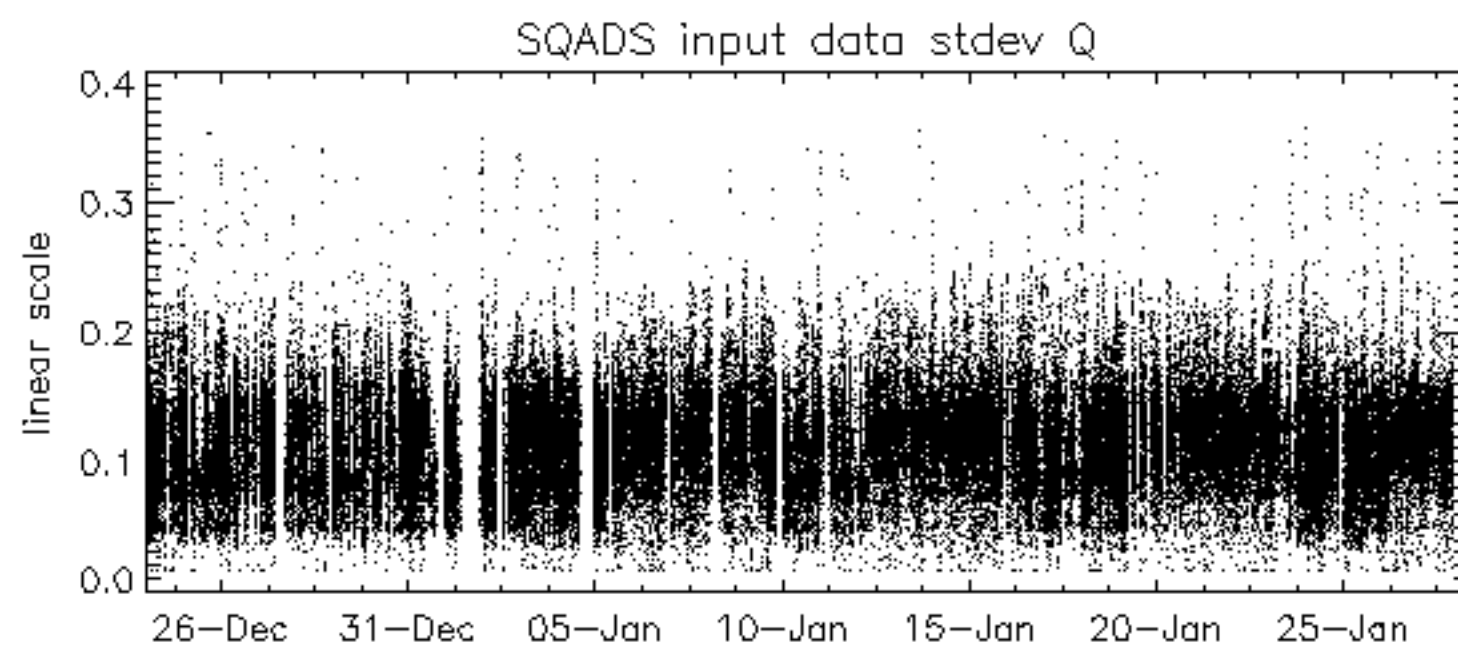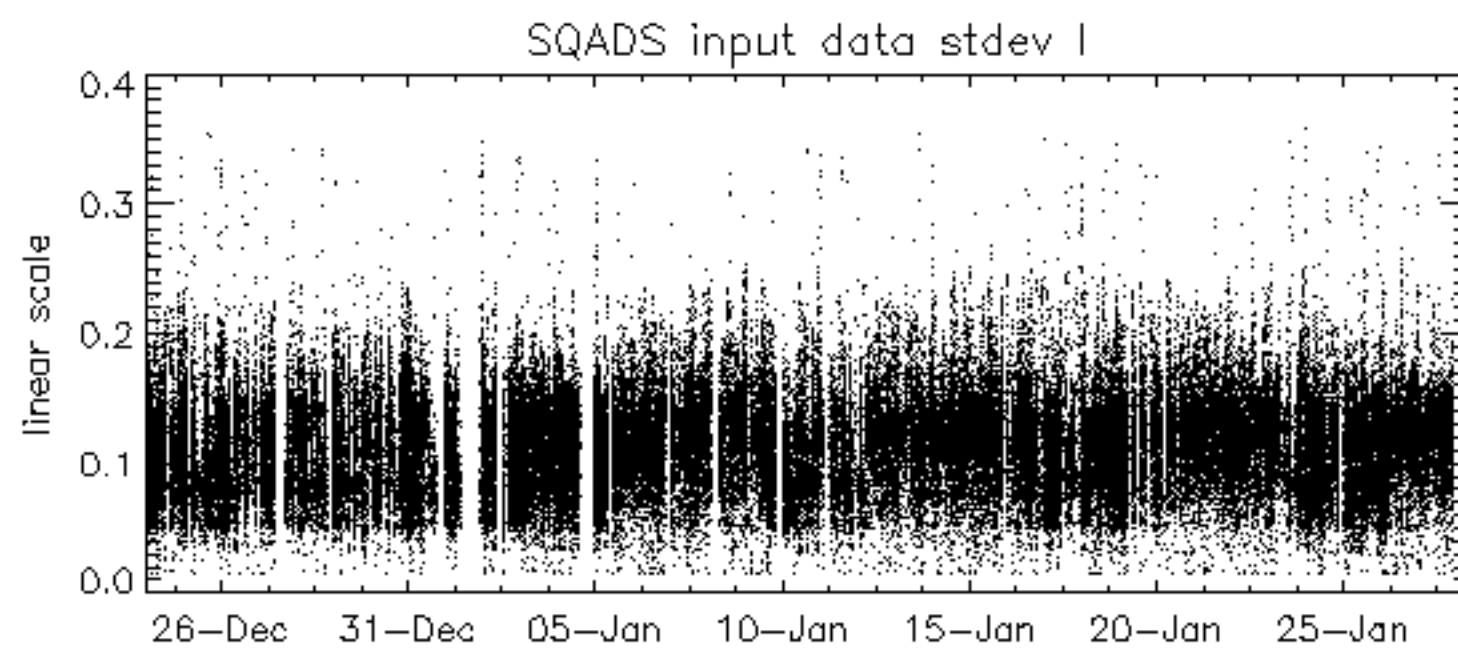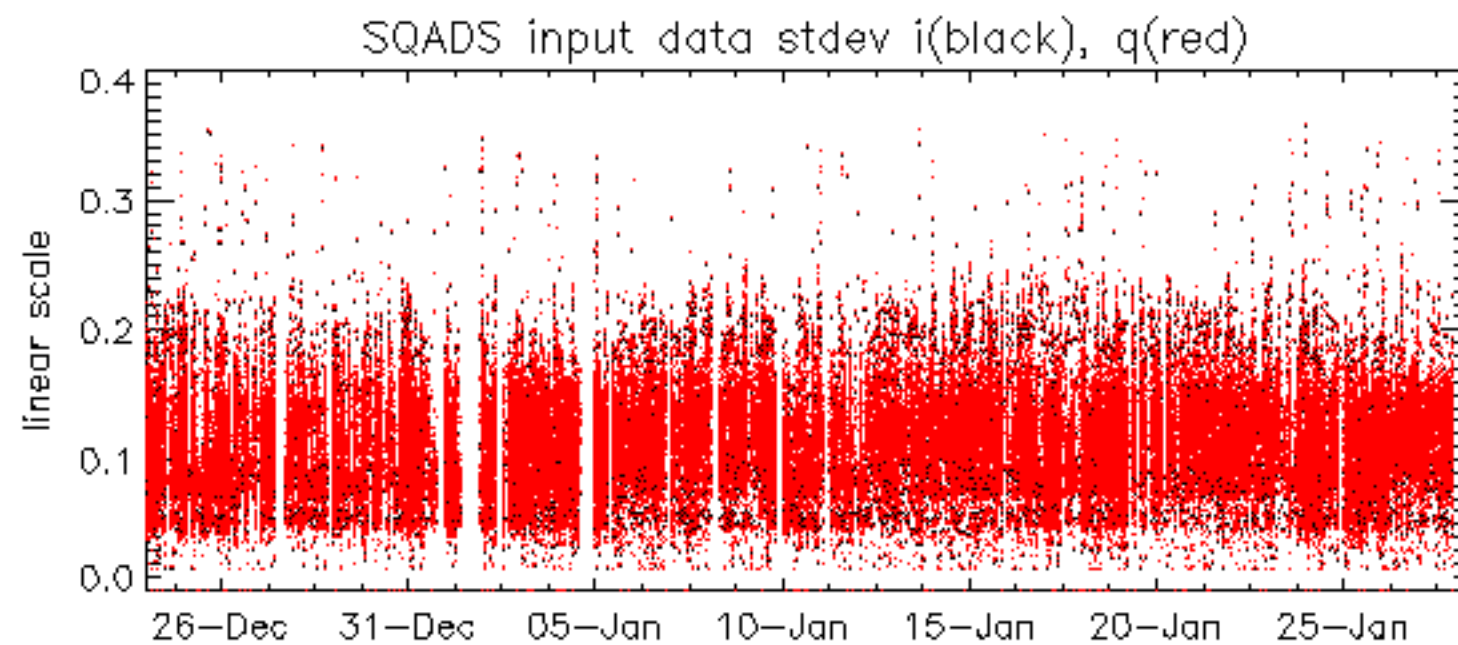

No unavailabilities during the reported period.